 



How To Preheat the Oven

1. **Touch** the ON/OFF button. 
2. **Touch** the preheat icon. 
3. **Enter** the preheat temperature using number pad. **Touch** the check mark.

When the preheat process is complete, the screen displays "Ready".

How to Create and Cook with a Recipe

 
 
1. **Touch** the recipe book icon or the white space on the screen.
2. **Touch** the plus icon.
3. **Select** the step type.
4. **Enter** the recipe name and description.
5. **Set** the cooking parameters. **Select** the cook by time or cook by probe icon. **Set** the humidity percentage, chamber temperature, and fan speed.
6. **Add** any additional stages or actions using the plus icon.
7. **Scroll** to "Pictures" to add a photo to the recipe.
8. **Scroll** to "Categories" to assign the recipe to a category.
9. **Touch** the save icon to save the recipe.
10. To cook using the created recipe, **touch** the recipe book icon. **Navigate** to the recipe. **Load** the food into the chamber and **touch** the recipe photo to start the cooking process.

How to Cook in Professional Mode

1. **Preheat** the oven.
2. **Touch** the professional cook icon.
3. **Select** a cooking mode: Convection, Combi, or Steam.
4. **Set** the cooking temperature parameters. **Select** the cook by time or cook by probe icon. **Set** the humidity percentage, chamber temperature, and fan speed.
5. If cooking by time, **enter** the desired cooking time or **touch** the infinity icon for an indefinite cooking timer.
6. **Load** the food into the oven.
7. **Touch** the start icon.

NOTE: To view the current oven temperature, **touch and hold** the set temperature displayed below the countdown timer.

8. At the end of the cooking process, **open** the door and remove the hot food.

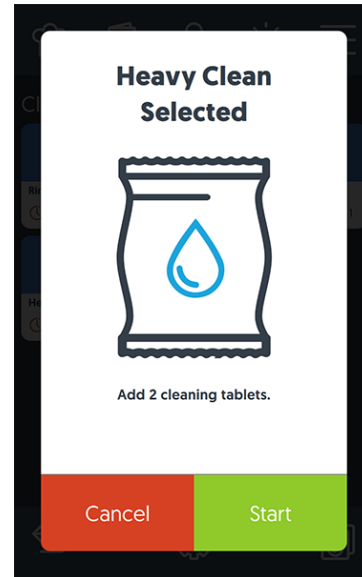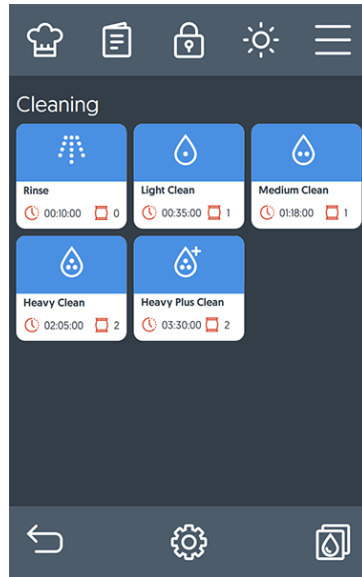

WARNING: Burn hazard.

Wear protective gloves, protective clothing, eye protection, and face protection when handling oven cleaner. Do not open the oven door during the cleaning cycle.

NOTICE: Do not use steel pads, wire brushes, or scrapers when cleaning the oven.

How to Clean the Oven using Cleaning Tablets*

1. **Clean** the door glass with Windex® or equivalent glass cleaner.
2. **Clean** the door gasket with soap and water.
3. **Close** the door and spray the exterior of the oven with stainless steel polish. Wipe with a non-abrasive scrub pad.
4. **Touch** the menu icon.
5. **Touch** the "Cleaning" icon.
6. **Select** the cleaning level, for example Heavy Clean. **Insert** the appropriate number of cleaning tablets in the drain. **Close** the drain screen. **Touch** the "Start" icon.
7. The oven will heat up and start the cleaning cycle.
8. **Touch** "Ok" when the cleaning cycle is complete.
9. **Leave** the door slightly ajar if the cleaning has been done at the end of the day.

How to Descale the Oven

1. **Make sure** you have Alto-Shaam ScaleFree Descaling Powder (CE-27889).
2. **Place** 7 oz. (198 g) of Alto-Shaam ScaleFree Descaling Powder into the cavity drain. **Close** the drain screen.
3. **Disconnect** the liquid cleaner hose, if equipped.
4. **Clean** the oven with a medium clean cycle.
5. **Spray** the interior of the oven using the hand shower.
6. If necessary, **open** the interior fan guard and rinse down the area behind the panel.
7. **Run** a rinse cycle.

*For liquid cleaning, refer to the Operator's Manual.

