

SHAWARMA MACHINES (ELECTRICAL)

USER MANUAL

SHAWARMA MACHINES (ELECTRICAL)

MODEL



EMP.DN.170-2R-USA
EMP.DN.171-2R-USA
EMP.DN.172-2R-USA



EMP.DN.170-3R-USA
EMP.DN.171-3R-USA



SHAWARMA MACHINES (ELECTRICAL)

CONTENTS

A	GENERAL INFORMATION	Page 2
A1	PRODUCT DESCRIPTION.....	Page 4
A2	TECHNICAL INFORMATION	Page 4
A3	TRANSPORTATION	Page 10
A4	UNPACKING	Page 10
B	INSTALLATION	Page 10
C	SAFETY INSTRUCTIONS	Page 11
D	OPERATION	Page 12
E	CLEANING & MAINTENANCE	Page 13
F	TROUBLESHOOTING	Page 14
G	SPARE PART LIST- EXPLODING DRAWING	Page 15
H	ELECTRIC CIRCUIT SCHEMA	Page 25

SHAWARMA MACHINES (ELECTRICAL)

A GENERAL INFORMATION

Before installing the appliance, read operation and maintenance instructions carefully. Wrong installation and part changing may damage the product or may cause injury on people. These are not in our company's responsibility to damage the appliance intentionally, negligence, detriments because of disobeying instructions and regulations, wrong connections. Unauthorized intervention to appliance invalidates the warranty.

1. This instruction manual should be kept in a safe place for future reference.
2. Installation should be made in accordance with ordinances and security rules of that country by a qualified service personnel.
3. This appliance has to be used by trained person.
4. Please turn off the appliance immediately in the event of malfunction or failure. The appliance should be repaired only by authorized service personnel. Please demand original spare part.

WARNING:

- This device must be installed in accordance with applicable legislation and should only be used in a well-ventilated area. Please refer to the instructions before installing and using this device.
- Improper installation, adjustment, modification, service or maintenance can result in property damage, injury or death. Read the installation, use and maintenance instructions before installing or servicing this equipment.

1. Do not use electrical appliances or switches.
2. Do not light cigarettes or matches.
3. Leave doors and windows as they are
4. Go outside

FOR YOUR SAFETY: Do not use or store gasoline or other flammable gas or liquid in the device.

SAFETY SYMBOLS



These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

SHAWARMA MACHINES (ELECTRICAL)

SERVICE AND MAINTENANCE / MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance.

Contactez un technicien agréé pour toute réparation ou maintenance.

Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure a faster service.

Model No.	
Serial No.	
voltage	
Purchase Date	

Authorized Service Agent Listing Reference the listing provided with the unit Or for an updated listing go to

Website / Site web: www.empero.com.tr

E-mail / Courriel: empero@empero.com.tr

Service Help Desk

Company	Galaxy Group Corp
Website / Site	www.galaxygroupcorp.com
telephone	(908) 315-3222
fax	-
Address:	899 Newark Tpke, Kearny NJ 07032 USA

IMPORTANT

Make sure that all paper protection and packaging have been removed before operating the device. This device should only be installed in the closed position.



WARNING : The device must be used by trained personnel.

SHAWARMA MACHINES (ELECTRICAL)

A1 PRODUCT DESCRIPTION

*The Professional Shawarma Machines, that provides high efficiency has been designed to be used in industrial kitchens.




Model	Depth (A) cm inch	Width (B) cm / inch	Height (C) cm inch	Approximate Weight	
				Unpacked Kg/Lb	Packed Kg/Lb
EMP.DN.170-2R-USA	599 mm 23.6"	506 mm 19.9"	872 mm 34.4"	31.5 kg 69.44 lb	37.5 kg 82.67 lb
EMP.DN.171-2R-USA	599 mm 23.6"	506 mm 19.9"	1007 mm 39.65"	34 kg 74.95 lb	40 kg 88.18 lb
EMP.DN.172-2R-USA	599 mm 23.6"	506 mm 19.9"	1147 mm 45.1"	37.5 kg 82.67 lb	44.00 kg 97.00 lb
EMP.DN.170-3R-USA	707 mm 27.8"	710 mm 28"	1147 mm 45.1"	46.5 kg 102.51 lb	53 kg 116.84 lb
EMP.DN.171-3R-USA	707 mm 27.8"	703 mm 27.7"	1283 mm 50.5"	49 kg 108.02 lb	55 kg 121.25 lb

A2 TECHNICAL INFORMATION

Model	Voltage	KW Total	Amps (Maximum)
EMP.DN.170-2R-USA	3P+N*208 V	3 KW	8.5 A
	1P+N*208V		14.5 A
EMP.DN.171-2R-USA	3P+N*208 V	5 KW	12 A
	1P+N*208 V		24 A
EMP.DN.172-2R-USA	3P+N*208 V	6 KW	14 A
	1P+N*208 V		29 A
EMP.DN.170-3R-USA	3P+N*208 V	8,1 KW	12.5 A
	1P+N*208 V		39 A
EMP.DN.171-3R-USA	3P+N*208 V	9 KW	25 A
	1P+N*208 V		43.5 A




SHAWARMA MACHINES (ELECTRICAL)

EMP.DN.170-2R-USA

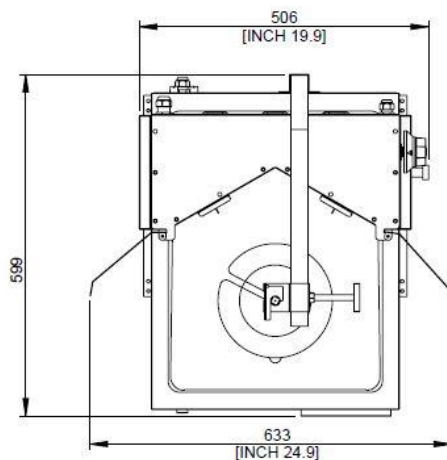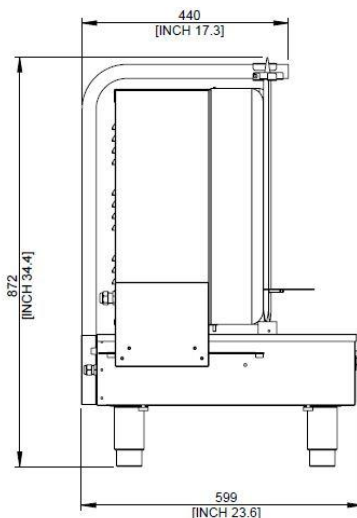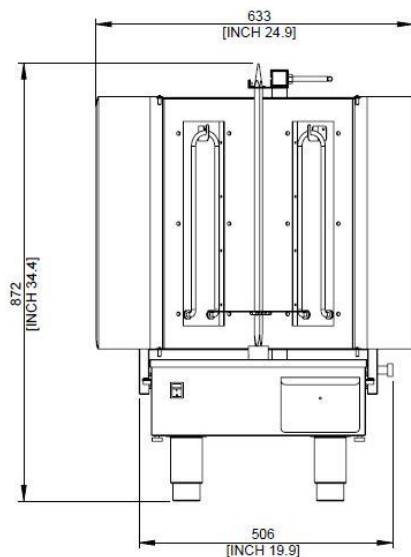

SHAWARMA MACHINES (ELECTRICAL)




EMP.DN.170-3R-USA

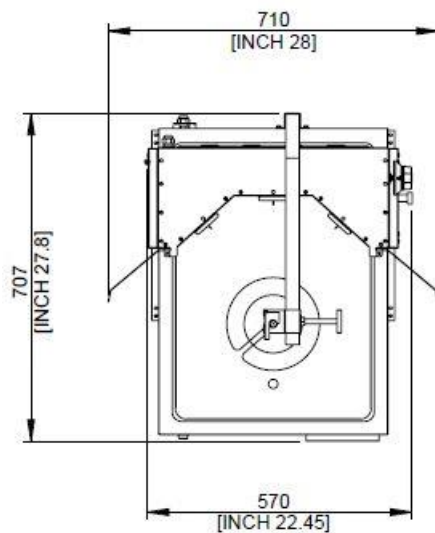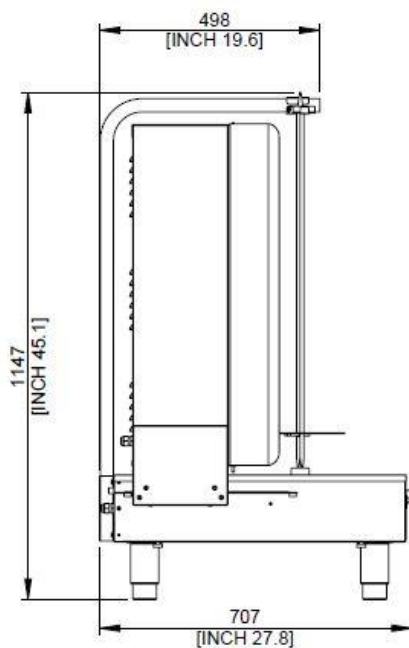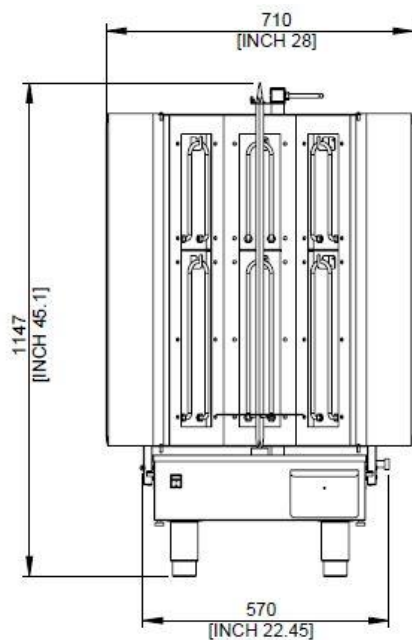






SHAWARMA MACHINES (ELECTRICAL)

EMP.DN.171-2R-USA

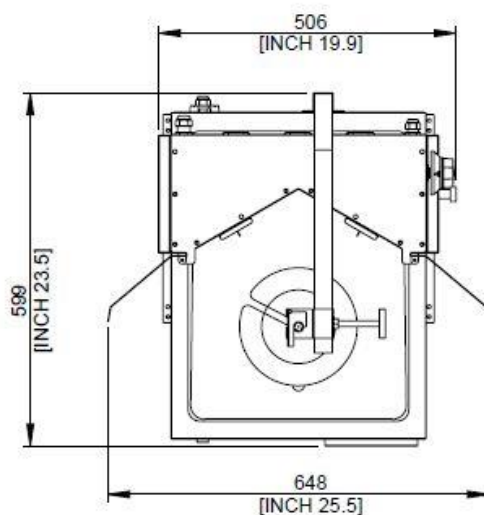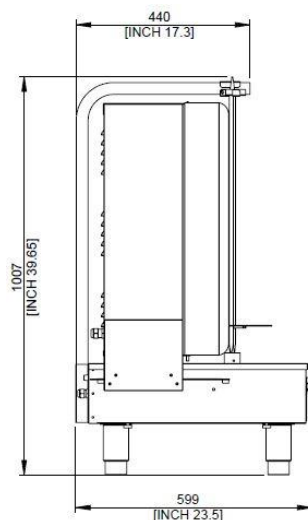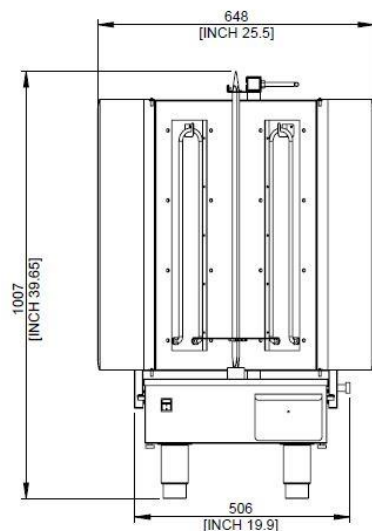


SHAWARMA MACHINES (ELECTRICAL)

EMP.DN.171-3R-USA

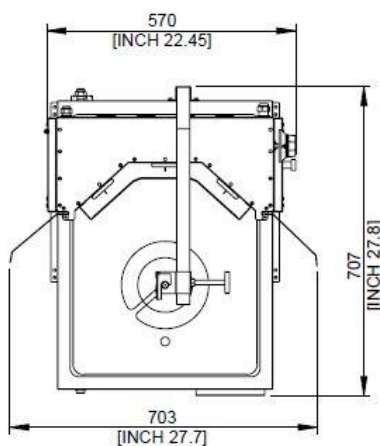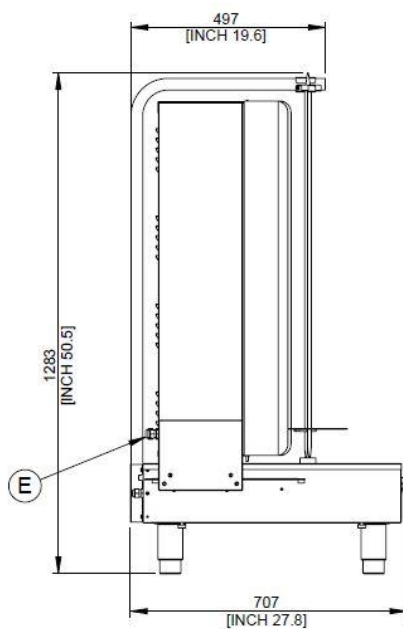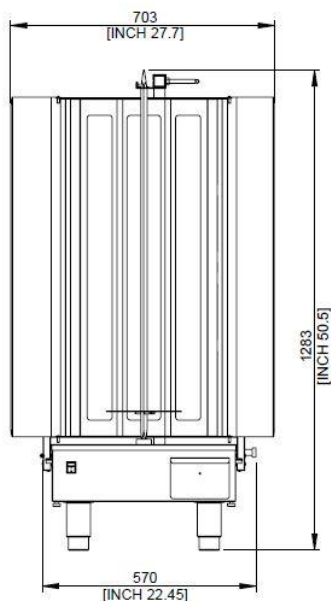

SHAWARMA MACHINES (ELECTRICAL)

EMP.DN.172-2R-USA

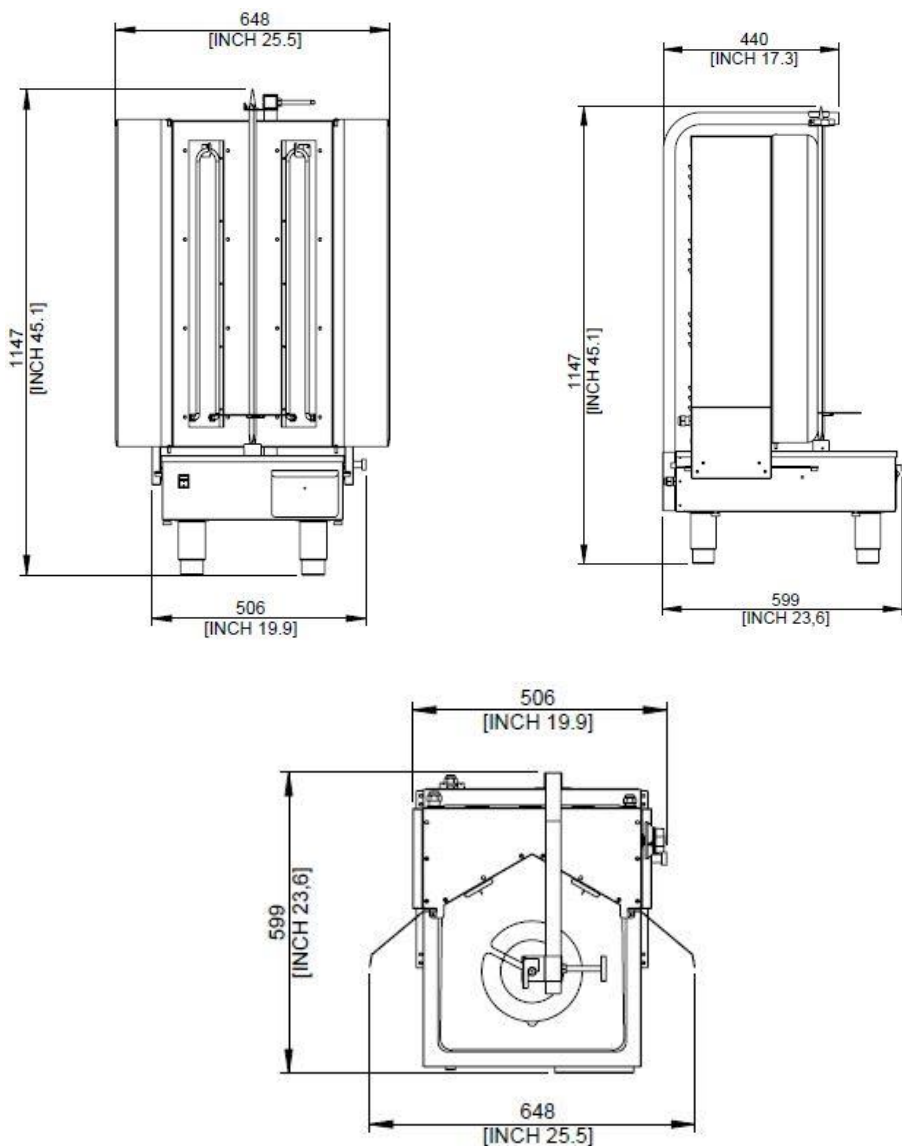

SHAWARMA MACHINES (ELECTRICAL)

A3 TRANSPORTATION

*This appliance can not be moved by hand from area to area. It must be moved on pallet with forklift truck.

A4 UNPACKING

*Please unpack the package according to the security codes and ordinances of current country and get rid from the pack. Parts which contacts with food are produced by stainless steel. All plastic parts are marked by material's symbol.

*Please check that all the parts of appliance had come completely and if they are damaged or not during the shipping.

B INSTALLATION

*Please place the product to straight and sturdy ground, please take necessary steps against possibility of overturn.

*Technician who will serve for installation and service for the appliance must be professional on this subject and must have installation and service licenses by the company.

*Connection to Electric Power Supply must be done by authorized person.

*Please be sure that the voltage connected to appliance must be equal with the voltage which is on appliance's label.



This appliance must be connected to an earthed outlet in accordance with safety rules and standards.

*Appliance's earthing must be connected to earthing line on panel which is nearest to electric installation.

*Connection to the main fuse and leak current fuse must be done in accordance with the current regulations.

*If the location where shawarma machines placed is covered with nonflammable heat insulation material, the distance between them must be 5 cm. Otherwise it should be at least 20 cm. The appliance shouldn't be operated under chimney hood.

SHAWARMA MACHINES (ELECTRICAL)

C SAFETY INSTRUCTIONS

-  *Do not use the appliance in insufficient lighted place .
-  *Do not touch the moving attachments while the appliance operates.
-  *Do not install the appliance in the presence of flammable or explosive materials.
-  *Do not operate the appliance when the machine is empty.
-  *Do not load so less or more than appliance's capacity .
-  *Do not attempt to use the appliance without suitable protective equipments.
-  *Because of any reason if there is a fire or flame flare where the appliance is used, turn off all gas valves and electric contactor switch quickly and use fire extinguisher .Never use water to extinguish the fire.
-  *All the damages because of not having earthing connection will not be on warranty.




Hot surface

SHAWARMA MACHINES (ELECTRICAL)

D OPERATION


*Control Panel;

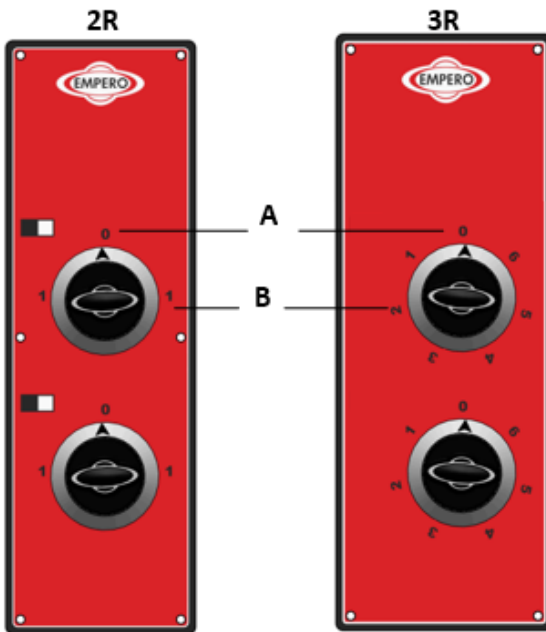

- A : Stop/OFF
- B : Stage Heat
- C : Resistance Diagram
- D : (1) Clockwise
- E : (0) Switch Off
- F : (2) Anticlockwise

C

	R1	R2	R3
1			
2			
3			
4			
5			
6			

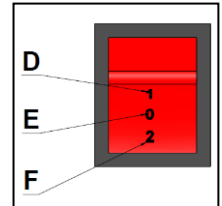

*Operating;

- Plug in the appliance.
- Take off the skewers and place the meats to the skewers.
- In order to fire the resistance, switch to desired heat setting.
- In order to operate electric motor, switch on.
- When the switch is at (1) position, the skewer turns on the direction of clockwise, when it is at (2) position, the skewer turns on the direction of anticlockwise.
- While the skewer is moving forward-back on the direction of resistance, you can adjust the suitable distance between resistance-skewer during cooking.
- Cooked meats can be accumulated at spillage tray with the help of shawarma blades.
- After cooking process, switch off the resistance.
- In order to turn off the motor that operates the skewer, switch off or unplug the appliance.



SHAWARMA MACHINES (ELECTRICAL)

E CLEANING & MAINTENANCE

➤ **CLEANING AND MAINTENANCE AFTER EVERY USE**

- After every meat cooking process, clean the body, spillage tray, skewer and resistance.
- Always turn off the appliance and disconnect from the power supply before cleaning.
- Do not use abrasive cleaning chemicals as these can leave harmful residues.
- Do not clean the appliance by spraying water directly, otherwise electric motor may get damaged.
- Make the residue of meat and burnt oil that accumulated at spillage tray wait at hot water and scrape with spatula.
- At shawarma machines with glass, clean the thermal glass after every use.

➤ **PERIODIC CLEANING AND MAINTENANCE**

- Maintenance should be done by qualified person.
- Get the periodic maintenance of the appliance once in every 15 days.
- The Shawarma Machines require low maintenance (Motor and ball bearings are lubricated).
- Maintain the moving slides of shawarma machines,
- Maintenance of the appliance's contactor should be done by compressed air according to frequency of use.

SHAWARMA MACHINES (ELECTRICAL)

F TROUBLESHOOTING

THE APPLIANCE DOESN'T OPERATE	1. Check if the appliance is plugged in. 2. Check the electrical connections and voltage.
--------------------------------------	---

MEATS ARE NOT COOKED WELL	1. Check the distance between skewer-resistance. 2. Do not put meat on the skewer more than it's capacity.
----------------------------------	--


THE APPLIANCE STOPPED	1. The appliance can stop due to low voltage. In this situation check the voltage.
------------------------------	--

- If cooking with shawarma machine is not done at suitable quality
- If any function of security doesn't work
 - Do not use the appliance.

***If these problems are still going on, contact with our authorized services.**

SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

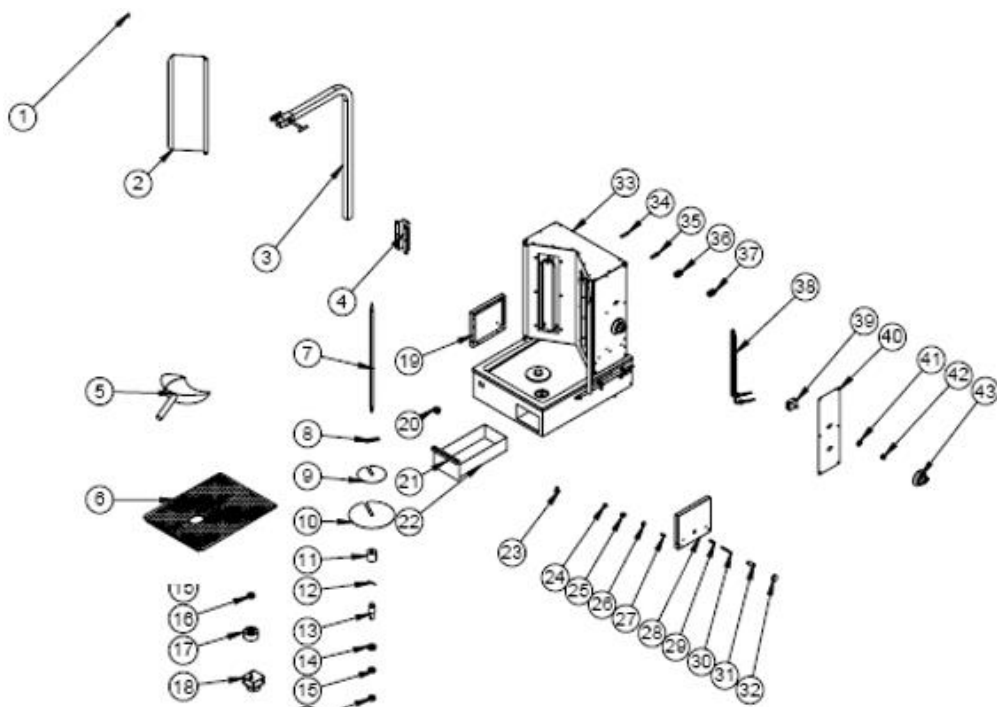

EMP.DN.170-2R-USA


SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.DN.170-2R-USA		
NO	PRODUCT NAME	P.CODE
1	DOOR PIN	YTL-KNX.PG7-KS-0015
2	FAN SHEET	YSC-KNX.DNR-LZ-0212
3	REAR L PROFILE	YPR-KNX.DNR-KS-0033
4	PROFILE CONNECTION SHEET	YSC-KNX.DNR-PN-0096
5	SHOVEL	M.MUH-066
6	STRAIN SHEET	YSC-KNX.DNR-PN-0157
7	ROTARY SKEWERS 578 MM	YTL-KNX.DNR-KS-0058
8	SPRING COPPER	B-KPL-SYH-5*97
9	Ø125 MM METAL MIRROR SHEET	YSC-KNX.DNR-LZ-0214
10	Ø200 MM MEAT MIRROR SHEET	YSC-KNX.DNR-LZ-0213
11	SKEWING APPARATUS (FEMALE)	YTL-KNX.DNR-KS-0059
12	PIN	YTL-KNX.DNR-KS-0037
13	SKEWING ATTACHMENT (MALE)	YTL-KNX.DNR-KS-0018
14	BEARING 6805 ZZ	M.RLM-ISI-004
15	51103 BEARING	M.RLM-ISI-005
16	BEARING 6903 RS	M.RLM-ISI-003
17	BEARING BEARING	YTL-KNX.DNR-KS-0031
18	ENGINE	M.ELK-MTR-RMM-007
19	BEARING CONNECTION SHEET LEFT	YSC-KNX.DNR-LZ-0189
20	1-0-2 KEY	M.ELK-SLT-AN-003
21	OIL PAN FRONT SHEET	YSC-KNX.DNR-PN-0088
22	OIL PAN	YSC-KNX.DNR-PN-0087
23	FOOT	M.AKS-AYK-PLS-001
24	DERLIN	YTL-KNX.DNR-KS-0030
25	627 C 7*22 MM 627ZZG17 BEARING	M.RLM-ISI-002
26	607 - 2 RS BEARING	M.RLM-ISI-006
27	CONNECTING PIN	YTL-KNX.DNR-KS-0025
28	BEARING CONNECTION SHEET RIGHT	YSC-KNX.DNR-LZ-0190
29	DIAMETER 8*35 SPRING	M.YAY-MUH-001
30	MOTION PIN	YTL-KNX.DNR-KS-0029
31	BODY CONNECTION	YTL-KNX.DNR-KS-0023
32	PUSH BUSH	YTL-KNX.DNR-KS-0022
33	CHASSIS	-
34	GLASS FUSE	M.ELK-SGR-017
35	FUSE SHOW	M.ELK-SGR-KTU-002
36	PG-16 CABLE GLAND	JP.M.ELK-RKR-PLS-001
37	PG-11 CABLE GLAND	M.ELK-RKR-PLS-003
38	126351-208V-1000W PIPE RESISTANCE	M.ELK-RZS-BRU-019
39	SWITCH 0-1 MONOPHASE	ERK.M.ELK-SLT-EGO-001
40	TICKET	M.AKS-ETK-ALM-032
41	SEALING SILICONE PLUG	M.ENJ-KNX-023
42	BUTTON SOCKET	M.AKS-DGM-SKT-002
43	BUTTON	M.AKS-DGM-EMP-024

SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

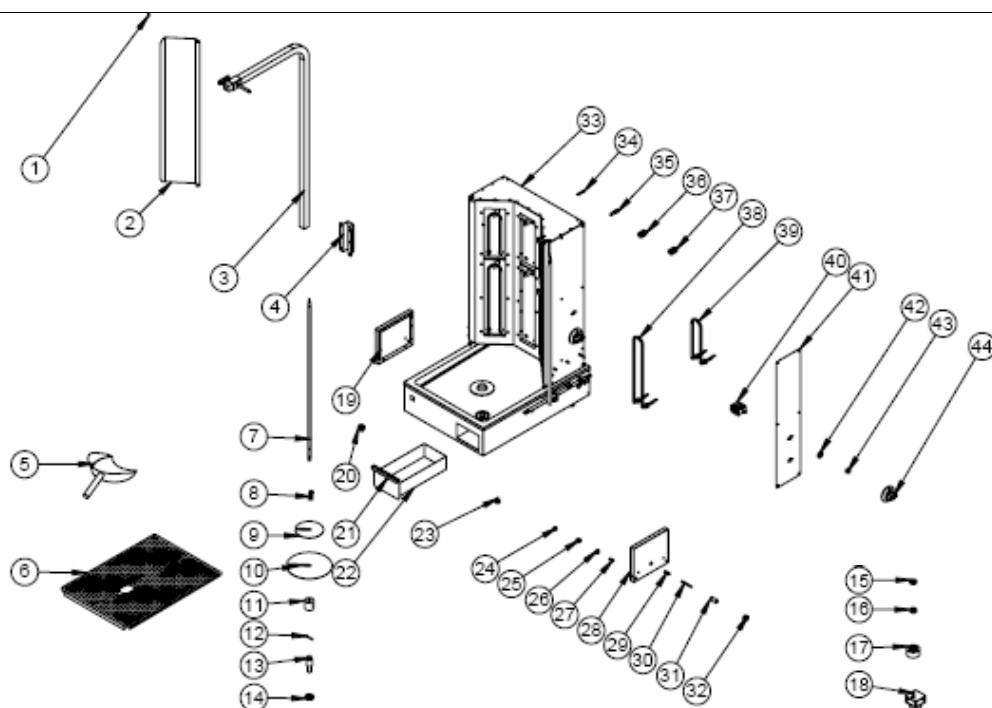

EMP.DN.170-3R-USA


SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.DN.170-3R-USA		
NO	PRODUCT NAME	P.CODE
1	DOOR PIN	YTL-KNX.PG7-KS-0015
2	FAN SHEET	YSC-KNX.DNR-LZ-0210
3	REAR L PROFILE	YPR-KNX.DNR-KS-0032
4	PROFILE CONNECTION SHEET	YSC-KNX.DNR-PN-0096
5	SHOVEL	M.MUH-066
6	SIEVE	YSC-KNX.DNR-PN-0158
7	ROTARY SKEWERS 865 MM	YTL-KNX.DNR-KS-0055
8	SPRING COPPER	B-KPL-SYH-5*97
9	Ø 125 MM MEAT MIRROR SHEET	YSC-KNX.DNR-LZ-0214
10	Ø 200 MM MEAT MIRROR SHEET	YSC-KNX.DNR-LZ-0213
11	SKEWING APPARATUS (FEMALE)	YTL-KNX.DNR-KS-0059
12	PIN	YTL-KNX.DNR-KS-0037
13	SKEWING ATTACHMENT (MALE)	YTL-KNX.DNR-KS-0018
14	BEARING 6805 ZZ	M.RLM-ISI-004
15	51103 BEARING	M.RLM-ISI-005
16	BEARING 6903 RS	M.RLM-ISI-003
17	BEARING BEARING	YTL-KNX.DNR-KS-0031
18	ENGINE	M.ELK-MTR-RMM-007
19	BEARING CONNECTION SHEET LEFT	YSC-KNX.DNR-LZ-0043
20	1-0-2 KEY	M.ELK-SLT-AN-003
21	OIL PAN FRONT SHEET	YSC-KNX.DNR-PN-0088
22	OIL PAN	YSC-KNX.DNR-PN-0087
23	FOOT	M.AKS-AYK-PLS-001
24	DERLIN	YTL-KNX.DNR-KS-0030
25	627 C 7*22 MM 627ZZG17 BEARING	M.RLM-ISI-002
26	607 - 2 RS BEARING	M.RLM-ISI-006
27	CONNECTING PIN	YTL-KNX.DNR-KS-0025
28	BEARING CONNECTION SHEET RIGHT	YSC-KNX.DNR-LZ-0042
29	DIAMETER 8*35 SPRING	M.YAY-MUH-001
30	MOTION PIN	YTL-KNX.DNR-KS-0029
31	BODY CONNECTION	YTL-KNX.DNR-KS-0023
32	PUSH BUSH	YTL-KNX.DNR-KS-0022
33	CHASSIS	-
34	GLASS FUSE	M.ELK-SGR-017
35	FUSE SHOW	M.ELK-SGR-KTU-002
36	PG-16 CABLE GLAND	JP.M.ELK-RKR-PLS-001
37	PG-11 CABLE GLAND	M.ELK-RKR-PLS-003
38	126351-208V-1000W PIPE RESISTANCE	M.ELK-RZS-BRU-019
39	125910 208V-1000W PIPE RESISTANCE	M.ELK-RZS-BRU-018
40	SWITCH 0-6 STAGE 16A	ERK.M.ELK-SLT-EGO-002
41	TICKET	M.AKS-ETK-ALM-035
42	SEALING SILICONE PLUG	M.ENJ-KNX-023
43	BUTTON SOCKET	M.AKS-DGM-SKT-002
44	BUTTON	M.AKS-DGM-EMP-024

SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

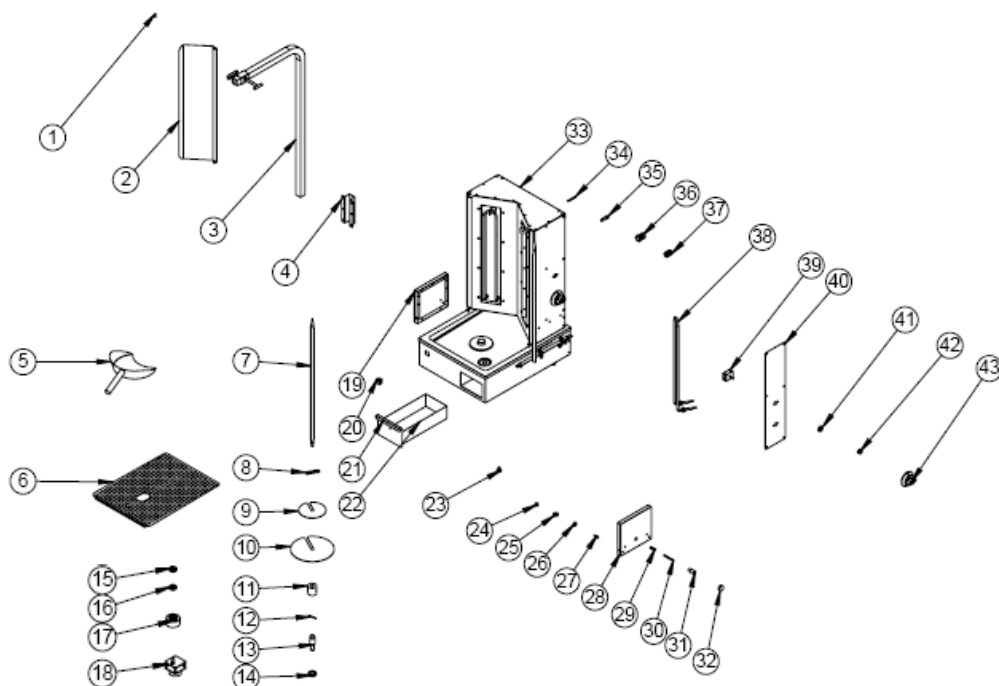

EMP.DN.171-2R-USA

SHAWARMA MACHINES (ELECTRICAL)


G SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.DN.171-2R-USA		
NO	PRODUCT NAME	P.CODE
1	DOOR PIN	YTL-KNX.PG7-KS-0015
2	FAN SHEET	YSC-KNX.DNR-LZ-0225
3	REAR L PROFILE	YPR-KNX.DNR-KS-0034
4	PROFILE CONNECTION SHEET	YSC-KNX.DNR-PN-0096
5	SHOVEL	M.MUH-066
6	STRAIN SHEET	YSC-KNX.DNR-PN-0157
7	ROTARY SKEWERS 713 MM	YTL-KNX.DNR-KS-0063
8	SPRING COPPER	B-KPL-SYH-5*97
9	Ø125 MM METAL MIRROR SHEET	YSC-KNX.DNR-LZ-0214
10	Ø200 MM MEAT MIRROR SHEET	YSC-KNX.DNR-LZ-0213
11	SKEWING APPARATUS GROUP (FEMALE)	YTL-KNX.DNR-KS-0059
12	PIN	YTL-KNX.DNR-KS-0037
13	SKEWING DEVICE GROUP (MALE)	YTL-KNX.DNR-KS-0018
14	BEARING 6805 ZZ	M.RLM-ISI-004
15	51103 BEARING	M.RLM-ISI-005
16	BEARING 6903 RS	M.RLM-ISI-003
17	BEARING BEARING	YTL-KNX.DNR-KS-0031
18	ENGINE	M.ELK-MTR-RMM-007
19	BEARING CONNECTION SHEET LEFT	YSC-KNX.DNR-LZ-0189
20	1-0-2 KEY	M.ELK-SLT-AN-003
21	OIL PAN FRONT SHEET	YSC-KNX.DNR-PN-0088
22	OIL PAN	YSC-KNX.DNR-PN-0087
23	FOOT	M.AKS-AYK-PLS-001
24	DERLIN	YTL-KNX.DNR-KS-0030
25	627 C 7*22 MM 627ZZG17 BEARING	M.RLM-ISI-002
26	607 - 2 RS BEARING	M.RLM-ISI-006
27	CONNECTING PIN	YTL-KNX.DNR-KS-0025
28	BEARING CONNECTION SHEET RIGHT	YSC-KNX.DNR-LZ-0190
29	DIAMETER 8*35 SPRING	M.YAY-MUH-001
30	MOTION PIN	YTL-KNX.DNR-KS-0029
31	BODY CONNECTION	YTL-KNX.DNR-KS-0023
32	PUSH BUSH	YTL-KNX.DNR-KS-0022
33	CHASSIS	-
34	GLASS FUSE	M.ELK-SGR-017
35	FUSE SHOW	M.ELK-SGR-KTU-002
36	PG-16 CABLE GLAND	JP.M.ELK-RKR-PLS-001
37	PG-11 CABLE GLAND	M.ELK-RKR-PLS-003
38	125908 208V-2000W PIPE RESISTANCE	M.ELK-RZS-BRU-016
39	SWITCH 0-1 MONOPHASE	ERK.M.ELK-SLT-EGO-001
40	TICKET	M.AKS-ETK-ALM-033
41	SEALING SILICONE PLUG	M.ENJ-KNX-023
42	BUTTON SOCKET	M.AKS-DGM-SKT-002
43	BUTTON	M.AKS-DGM-EMP-024

SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

EMP.DN.171-3R-USA

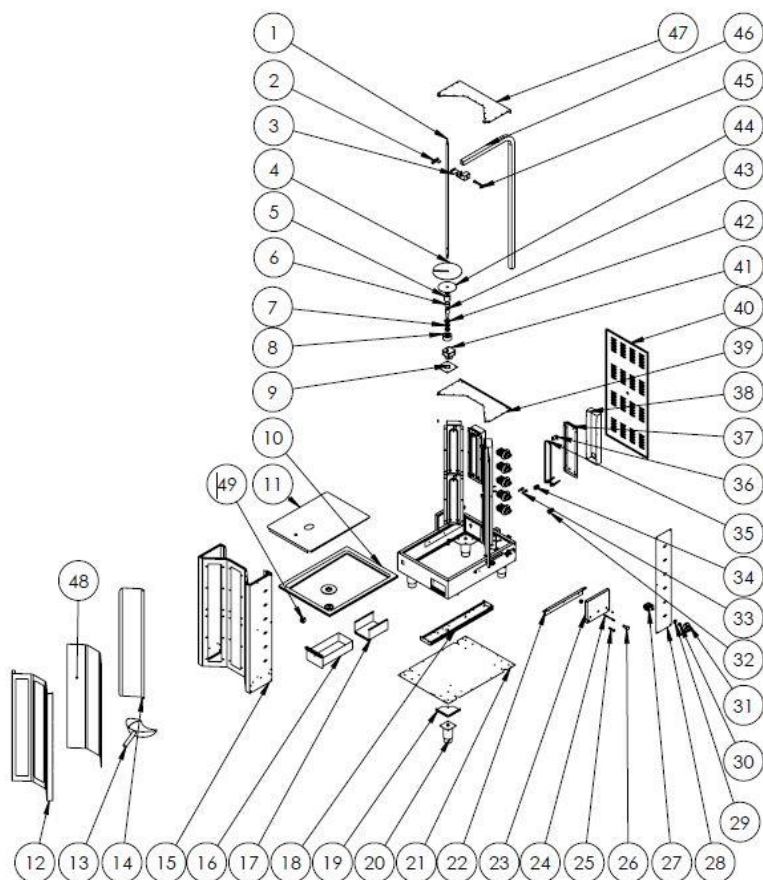

SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.DN.171-3R-USA		
NO	PRODUCT NAME	P.CODE
1	EMP.DN.151-3R-UL ROTARY SHAFT 1002 MM	YTL-KNX.DNR-KS-0065
2	DN151-Y HANGER MALE	YSC-KNX.DNR-LZ-0047
3	DN151-Y HANGER THREAD BOTTOM SC	YSC-KNX.DNR-LZ-0049
4	EMP.DN.150-3R-UL DIAMETER 200MM MEAT MIRROR SC	YSC-KNX.DNR-LZ-0213
5	EMP.DN.150-3R-UL SHANK TURNING APPARATUS GROUP (FEMALE) 40 MM	YTL-KNX.DNR-KS-0059
6	32x1.5 PIPED PIPE MEAT PAN RING	YBR-KNX.DNR-KS-0005
7	17x31x8 BEARING (51103)	M.RLM-ISI-005
8	EMP.KLG.015 (F1) BEARING HOUSING-3,4 CM	YTL-KNX.DNR-KS-0031
9	DN151-Y BEARING HOUSING CONNECTION PLATE	YSC-KNX.DNR-PN-0099
10	PRESS PRINTING PAN 49x66 (LASER CUT)	M.MTS-KNX-DNR-001
11	EMP.DN.150-3R-UL STRAINER	YSC-KNX.DNR-PN-0158
12	WIRE SHEET 2	EMP.DN.171-3R-USA
13	EMP.DN.UL COLLECTION SHOVEL	M.MUH-066
14	EMP.DN.151-3R-UL-YELP FAN SHEET	YSC-KNX.DNR-LZ-0238
15	EMP.DN.171-3R-UL-BODY SHEET	YSC-KNX.DNR-LZ-0259
16	DN151-Y OIL PAN	YSC-KNX.DNR-PN-0087
17	DN151-Y OIL SLED SHEET	YSC-KNX.DNR-PN-0093
18	DN151-Y ENGINE MOUNTING PLATE	YSC-KNX.DNR-PN-0098
19	EMP.DN.151-3R-UL PIPE FOOT SUPPORT SHEET	YSC-KNX.DNR-LZ-0274
20	13 CM CHROME PIPE FOOT ASSEMBLY-1	M.AKS-AYK-INX-001
21	DN151-Y BOTTOM COVER	YSC-KNX.DNR-PN-0091
22	DN151-Y LOWER SKID PLATE	YSC-KNX.DNR-LZ-0045
23	DN-150-Y-BEARING BG-SC-RIGHT	YSC-KNX.DNR-LZ-0042
24	SLIDE SYSTEM FIXING MECHANISM	YTL-KNX.DNR-KS-0029
25	SLIDING SYSTEM BALL BEARING GROUP CLAMPING PIN 2.5 CM	YTL-KNX.DNR-KS-0025
26	SLIDE SYSTEM FIXING MECHANISM (BODY CONNECTION)	YTL-KNX.DNR-KS-0023
27	EGO SWITCH 0-6 STAGE 16A 4927215000	M.ELK-SLT-EGO-002
28	EMP.DN.171-3R-UL-ALM LABEL	M.AKS-ETK-ALM-036
29	EMP.DN-UL FAUCET SEALING SILICONE TIP	M.ENJ-KNX-023
30	FAUCET BUTTON SOCKET 6 MM ELK Ü	M.AKS-DGM-SKT-002
31	EMP BUTTON ARROW BLACK PRINTED	M.AKS-DGM-EMP-024
32	PG-16GRAY CABLE GLAND WITH NUT	M.ELK-RKR-PLS-001
33	FUSE HOLDER, 5X20 MM,10A,250V,CENTRAL MOUNNT ENG,3101.0215 SCHURTER INSURANCE NEST	M.ELK-SGR-KTU-002
34	PG-11 GRAY CABLE GLAND WITH NUT	M.ELK-RKR-PLS-003
35	126805-208V-1500W PIPE RESISTANCE (EMP.DN.170-2R-USA)	M.ELK-RZS-BRU-019




SHAWARMA MACHINES (ELECTRICAL)

36	EMP.DN.170-UL-RESISTANCE HANGING SC	YSC-KNX.DNR-LZ-0257
37	EMP.DN.170-UL RESISTANCE SHEET	YSC-KNX.DNR-LZ-0243
38	EMP.DN.170-UL RESISTANCE INSULATED SHEET	YSC-KNX.DNR-LZ-0250
39	EMP.DN.150-3R-UL BOTTOM SHEET NEW	YSC-KNX.DNR-LZ-0203
40	EMP.DN.151-3R-UL-BACK COVER SHEET	YSC-KNX.DNR-LZ-0237
41	CROUZET 1RPM 110V. MOTOR	M.ELK-MTR-RMM-007
42	25x37x7 BEARING (6805 ZZ)	M.RLM-ISI-004
43	SHANK TURNING APPARATUS GROUP (MALE) 80 MM	YTL-KNX.DNR-KS-0018
44	EMP.DN.150-3R-UL DIAMETER 125MM ET MIRROR SC	YSC-KNX.DNR-LZ-0214
45	EMP.DN.150-3R-UL SHANK FIXING SHAFT	YTL-KNX.DNR-KS-0061
46	EMP.DN.151-3R-UL REAR L PROFILE 30-30-1,5 1569	YPR-KNX.DNR-KS-0036
47	EMP.DN.150-3R-UL TOP SHEET NEW	YSC-KNX.DNR-LZ-0204
48	CR-WIRE	EMP.DN.171-3R-USA
49	T105 16A 1-3 HP 125-250 VAC 0-1-2 BLACK KEY BIG-USA	M.ELK-SLT-AN-003 T105

SHAWARMA MACHINES (ELECTRICAL)

G SPARE PART LIST-EXPLODING DRAWING

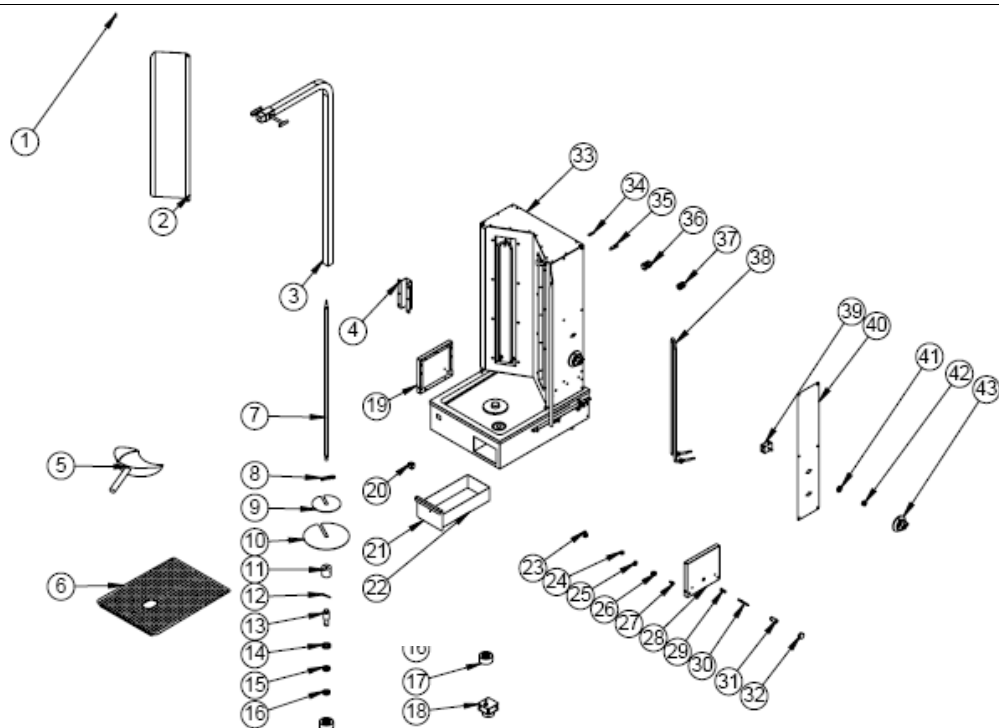

EMP.DN.172-2R-USA

SHAWARMA MACHINES (ELECTRICAL)


G SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.DN.172-2R-USA		
NO	PRODUCT NAME	P.CODE
1	DOOR PIN	YTL-KNX.PG7-KS-0015
2	FAN SHEET	YSC-KNX.DNR-LZ-0210
3	REAR L PROFILE	YPR-KNX.DNR-KS-0035
4	PROFILE CONNECTION SHEET	YSC-KNX.DNR-PN-0096
5	SHOVEL	M.MUH-066
6	STRAIN SHEET	YSC-KNX.DNR-PN-0157
7	ROTARY SKEWERS 853 MM	YTL-KNX.DNR-KS-0064
8	SPRING COPPER	B-KPL-SYH-5*97
9	Ø125 MM METAL MIRROR SHEET	YSC-KNX.DNR-LZ-0214
10	Ø200 MM MEAT MIRROR SHEET	YSC-KNX.DNR-LZ-0213
11	SKEWING APPARATUS (FEMALE)	YTL-KNX.DNR-KS-0059
12	PIN	YTL-KNX.DNR-KS-0037
13	SKEWING ATTACHMENT (MALE)	YTL-KNX.DNR-KS-0018
14	BEARING 6805 ZZ	M.RLM-ISI-004
15	51103 BEARING	M.RLM-ISI-005
16	BEARING 6903 RS	M.RLM-ISI-003
17	BEARING BEARING	YTL-KNX.DNR-KS-0031
18	ENGINE	M.ELK-MTR-RMM-007
19	BEARING CONNECTION SHEET LEFT	YSC-KNX.DNR-LZ-0189
20	1-0-2 KEY	M.ELK-SLT-AN-003
21	OIL PAN FRONT SHEET	YSC-KNX.DNR-PN-0088
22	OIL PAN	YSC-KNX.DNR-PN-0087
23	FOOT	M.AKS-AYK-PLS-001
24	DERLIN	YTL-KNX.DNR-KS-0030
25	627 C 7*22 MM 627ZZG17 BEARING	M.RLM-ISI-002
26	607 - 2 RS BEARING	M.RLM-ISI-006
27	CONNECTING PIN	YTL-KNX.DNR-KS-0025
28	BEARING CONNECTION SHEET RIGHT	YSC-KNX.DNR-LZ-0190
29	DIAMETER 8*35 SPRING	M.YAY-MUH-001
30	MOTION PIN	YTL-KNX.DNR-KS-0029
31	BODY CONNECTION	YTL-KNX.DNR-KS-0023
32	PUSH BUSH	YTL-KNX.DNR-KS-0022
33	CHASSIS	-
34	GLASS FUSE	M.ELK-SGR-017
35	FUSE SHOW	M.ELK-SGR-KTU-002
36	PG-16 CABLE GLAND	JP.M.ELK-RKR-PLS-001
37	PG-11 CABLE GLAND	M.ELK-RKR-PLS-003
38	125909 208V-2500W PIPE RESISTANCE	M.ELK-RZS-BRU-017
39	SWITCH 0-1 MONOPHASE	ERK.M.ELK-SLT-EGO-001
40	TICKET	M.AKS-ETK-ALM-034
41	SEALING SILICONE PLUG	M.ENJ-KNX-023
42	BUTTON SOCKET	M.AKS-DGM-SKT-002
43	BUTTON	M.AKS-DGM-EMP-024

SHAWARMA MACHINES (ELECTRICAL)

H ELECTRIC CIRCUIT SCHEMA

EMP.DN.170-171-172-2R-USA

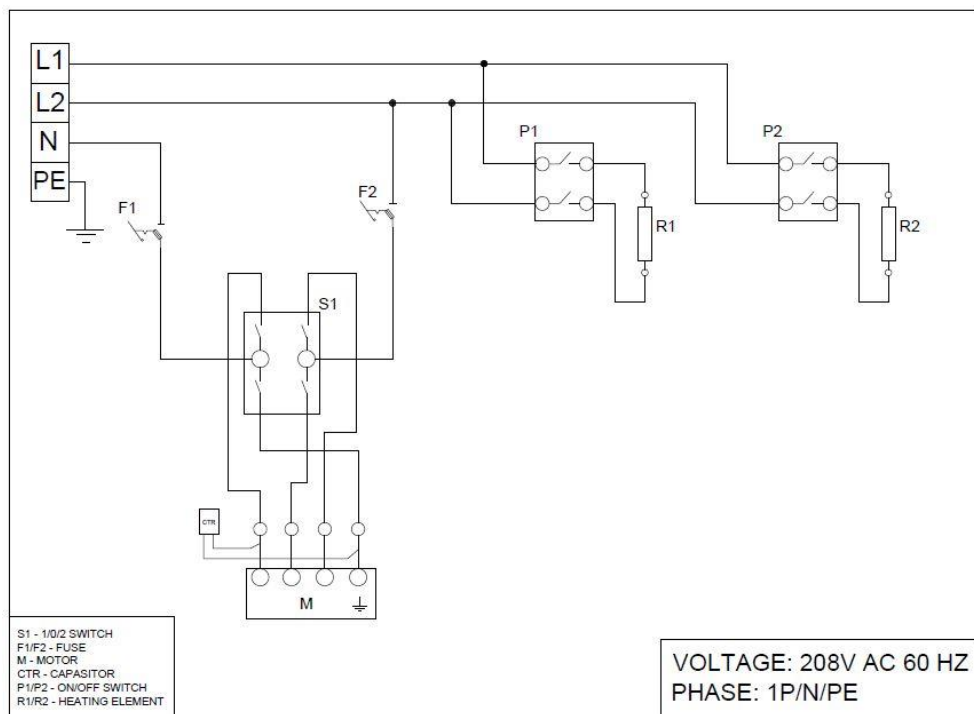

SHAWARMA MACHINES (ELECTRICAL)

H ELECTRIC CIRCUIT SCHEMA

EMP.DN.170-171-172-3R-USA

