

INSTALLATION & OPERATIONS INSTRUCTIONS *VHSS: Heated Models*



CONTENTS

(1)	Introduction	3
1.	1 Serial Number	3
(2)	Warning Labels & Safety Instructions	4
(3)	PRIOR TO UNPACKING EQUIPMENT!	5
(4)	General Electrical & Grounding	6
4.	1 Cord Connected	6
(5)	Installation Instructions	7
5. 5. 5. 5.	2 Removing Case From Shipping Skid	7 8
(6)	Joining kit installation (VHSS to VHSS)	10
6.	1 Installation for joined cases (Lineups)	10
(7)	Feature Overview	13
(8)	Shelving Installation and Removal	14
8.	1 Shelf Brackets and Supports	14
(9)	SLIDE-IN LEG & CASTER ADJUSTMENTS	17
(10)	Control Operation	19
(11)	Food Packaging Recommendations	21
(12)	Cleaning Instructions	22
	2.1 Daily Cleaning	
(13)	Service	24
(14)	Sale & Disposal	25
14	4.1 Owner Responsibility	25
(15)	Troubleshooting	26
(16)	Wiring Diagrams	27
	6.1 VHSS2460, VHSS3660, VHSS4860, VHSS2478, VHSS3678 6.2 VHSS4878	
(17)	VHSS Service Parts	29
(18)	Options	32
	8.1 Rear Swinging Door	32

(1) INTRODUCTION

Thank you for purchasing a Federal Industries display case. This manual contains important instructions for installing and servicing your new display case. A repair parts list and wiring diagram are also included in the manual. Read all of these documents carefully before installing or servicing your case.



NOTICE

Read this manual before installing your case. Keep this manual and refer to it before doing any service on the equipment. Failure to do so could result in personal injury or damage to the case.



NOTICE

Installation and service of the electrical components in the case must be performed by a licensed electrician.

The portions of this manual covering components contain technical instructions intended only for persons qualified to perform electrical work.



DANGER

Improper or faulty hookup of electrical components in the case can result in severe injury or death.

All electrical wiring hookups must be done in accordance with all applicable local, regional, or national standards.

1.1 SERIAL NUMBER

Record the model and serial numbers of the case for easy reference. Always refer to both model and serial numbers in your correspondence with Federal regarding the case.

Case Model	Serial Number

This manual cannot cover every installation, use, or service situation. If you need additional information, call or write us:

WARRANTY/TECHNICAL SERVICE DEPARTMENT

Parts Town 1200 Greenbriar Dr. Addison, IL 60101

Toll Free: (833) 238-8168

Email: techservice@partstown.com



(2) WARNING LABELS & SAFETY INSTRUCTIONS



This is the safety-alert symbol. When you see this symbol on your case or in the manual, be alert to the potential for personal injury or damage to your equipment.

Be sure you understand all safety messages and always follow recommended precautions and safe operating procedures.



NOTICE TO EMPLOYERS:

You must make sure that everyone who installs, uses, or services your case is thoroughly familiar with all safety information and procedures.

Important safety information is presented in this section and throughout the manual. The following signal words are used in the warning and safety messages:

DANGER:	Severe injury or death <u>will</u> occur if you ignore the message.
WARNING:	Severe injury or death <u>can</u> occur if you ignore the message.
CAUTION:	Minor injury or damage to your case <u>can</u> occur if you ignore the message.
NOTICE:	This is important installation, operation, or service information. If you ignore the message, you may damage your case.

The warning and safety labels shown throughout this manual are placed on your Federal Industries case at the factory. Follow all warning label instructions. If any warning or safety labels become lost or damaged, call our customer service department at (800) 356-4206 for replacements.





Located at front of unit and on shelves

(3) PRIOR TO UNPACKING EQUIPMENT!

Inspect for shipping damage.

You are responsible for filing all freight claims with the delivering truck line. Inspect all cartons and crates for damage as soon as they arrive. If damage is noted to shipping crates, cartons, or if a shortage is found, note this on the bill of lading (all copies) prior to signing.

If damage is discovered when the case is uncrated, immediately call the delivering truck line and follow-up the call with a written report indicating concealed damage to your shipment. Ask for an immediate inspection of your concealed damaged item. Crating material must be retained to show the inspector from the truck line.

(4) GENERAL ELECTRICAL & GROUNDING



WARNING:

Improper or faulty hookup of electrical components in the display case can result in severe injury or death.

4.1 CORD CONNECTED

All standard models are supplied with a power cord that is properly sized to the amperage requirements of the case. See the rating plate for specific unit requirements. This can be located as shown in the "FEATURE IDENTIFICATION" section of this manual. The cord is factory installed protruding from the bottom rear corner of the case.

A separate circuit for each display case is required to prevent other appliances on the same circuit from overloading the circuit and causing malfunction.

	DIMENSIONS		SHELVING			STANDARD CONNECTION			SHIP		
			JNS	L1		D1	INTERIOR		CORD & PLUG		WEIGHT
MODEL	L	D	Н	# OF	LI	DI	VOLUME	2 WIRE + GROUND		NEMA	WEIGHT
	in	in	in	TIERS	in	in	CU FT	208-240/60/1		CORD &	LBS
	mm	mm	mm		mm	mm		AMPS	MAX FUSE SIZE	PLUG	KILO
VHSS2460S	24	33	60	3	32.25	16.61	9.07	6.0 @208	15	NEMA	310
V113324003	610	838	1524		819	422	5.07	6.9 @ 240	15	6-15P	141
VHSS3660S	36	33	60	3	43.25	16.61	13.98	9.7 @ 208	15	NEMA	355
V113330003	914	838	1524		1099	422	13.36	11.1@240	15	6-15P	161
VHSS4860S	47.25	33	60	3	55.25	16.61	18.48	13.4@208	20	NEMA	490
V113346003	1200	838	1524		1403	422		15.4@240	20	6-20P	222

	DIMENSIONS		INIC	SHELVING				STAND	SHIP		
	DIIVI	DIIVIENSIONS			L1	D1	INTERIOR	C	ORD & PLUG		WEIGHT
MODEL	L	D	Н	#OF		DI.	VOLUME	2 WIRE	+ GROUND	NEMA	WEIGHT
	in	in	in	TIERS	in	in	CUFT	208-2	240/60/1	CORD	LBS
	mm	mm	mm		mm	mm		AMPS	MAX FUSE SIZE	& PLUG	KILO
VHSS2478S	24	33	78	4	32.25	16.61	12.64	7.3 @ 208	15	NEMA	510
V113324763	610	838	1981		819	422	12.04	8.6 @ 240		6-15P	231
VHCC36700	36	33	78	4	43.25	16.61	10.47	12.0 @ 208	30	NEMA	555
VHSS3678S	914	838	1981	4	1099	422	19.47	13.5 @ 240	20	6-20P	252
VHSS4878S	47.25	33	78	- 4	55.25	16.61	25.74	16.2 @ 208	30	NEMA	580
V ПЭЭ46/63	1200	838	1981	4	1403	422		18.8 @ 240	30	L6-30P	263



CAUTION

Risk of Electric Shock. If the cord or plug becomes damaged, replace only with a cord and plug of the same type.

(5) INSTALLATION INSTRUCTIONS

5.1 LOCATING THE DISPLAY CASE

The case(s) should be located where it is not subjected to the direct rays of the sun, heating ducts, grills, radiator, or ceiling fans, nor should it be located near open doors or main door entrances. Also, avoid locations where there is excessive air movement or air disturbances and avoid high humidity locations such as near cases with water misting or fogging devices. Failure to locate this case as stated will reduce the performance of your display and will affect temperature of interior of case and product.


5.2 REMOVING CASE FROM SHIPPING SKID

Be sure to leave shelf packaging material intact for this step.

First remove the base front and rear panels


Two or more people should be involved in moving the unit from the pallet onto the ground.

Remove the (4) 1/4" screws that secure the case to the skid. These screws are located in the front and rear corners of the base rails. Base front and rear panels must be removed to access these bolts.

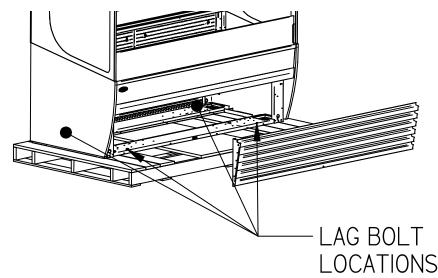

Once all the bolts are removed, slide the unit off the back of the shipping pallet, and tilt it so the rear corner touches the ground. Then have someone move pallet out from under the case and gently tilt the case forward until it touches the floor.

NOTE: see page 18 for removal of slide-in cases from pallet.

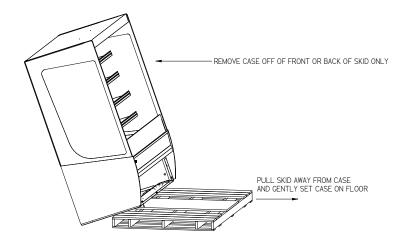

5.2.1 Removing Packaging Material

Remove bubble wrap and packing material for all shelves and panel, brackets, etc. If it is necessary to remove tape residue from plastic materials, use cleaning compounds recommended in the cleaning section of this manual.

5.2.2 Lifting and Moving the Case



Caution:

Do not push or pull against the glass air deflector on front of case. Doing so can cause the glass to break. Do not push or pull on side glass or pull on base panel. Doing so will break glass or pull out panel mounting screws. Care must be taken not to damage the case when removing it from the skid or moving the case.


5.3 <u>SINGLE CASE INSTALLATION (STAND ALONE UNITS)</u>


Leveling the Case

A wrench is included to aid in adjusting leg levelers.

Check the left-to-right level of the case along front of plastic air deflector retainer.

Check the front-to-rear level of the case along the interior ends of the case.

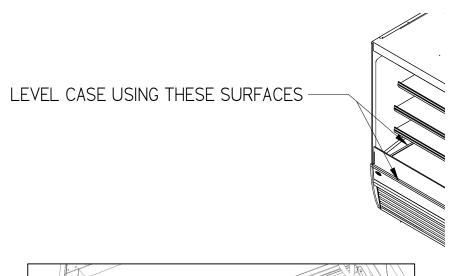

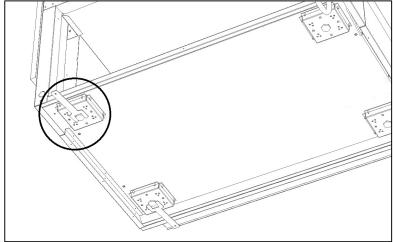

Adjust the (4) outside leg levelers as needed to level the case in each direction.

NOTE: If necessary, use a wood or plastic shim under each leg leveler to avoid scratching the tile floor.

Sealing Unit to The Floor

After the unit is positioned and the leg levelers are turned out, the unit needs to be sealed to the floor for NSF approved installation.

5.4 PRIOR TO INITIAL USE


Unit must be cleaned as indicated in the "WEEKLY CLEANING" section of this manual before initial use.


(6) JOINING KIT INSTALLATION (VHSS TO VHSS)

6.1 <u>INSTALLATION FOR JOINED CASES (LINEUPS)</u>

6.1.1 Join heated to heated (VHSS to VHSS)

- 1. Remove all Shelves, display deck, interior back panel(s), exterior back(s), front and rear base panel, and ceiling.
- 2. Position the right or left most unit in the desired position for the lineup to start, and level this case.
- 3. Push the 2nd case next to the 1st and line them up as closely as possible.
- 4. Adjust the leveling legs of the 2nd case until the units and joining holes align with each other.
- 5. Using (7) holes noted below, bolt units together with the supplied hardware, and attach joining trim to remove the gap between the decks in the joined units. Re-use the screws in the uprights, as well as the self-drilling screws provided with the kit.

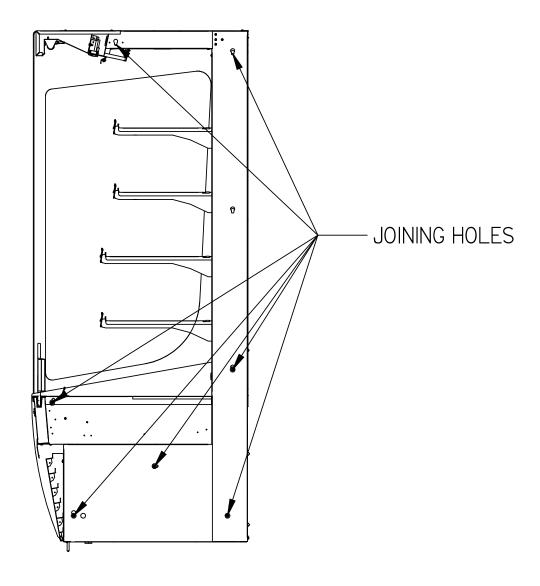

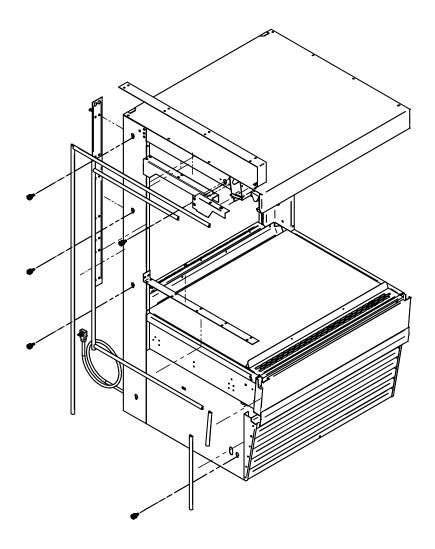


6. Replace all panels that were previously removed.


6.1.2 Join units with glass divider, or join heated to non-refrigerated

For this joining configuration, one unit will come with a lower end panel preinstalled with glass. Five bolt holes will be exposed on the outside of this panel and are the locations that will be used to join the units together. This kit also comes with top and rear exterior trim, but no interior trim.

- 1. Remove all Shelves, display deck, interior back panel(s), exterior back(s), front and rear base panel, and loosen honeycomb (see cleaning section for honeycomb removal) material on the unfinished end to expose the holes used to bolt units together.
- 2. Position the right or left most unit in the desired position for the lineup to start, and level this case.
- 3. Push the 2nd case next to the 1st and line them up as closely as possible.
- 4. Adjust the leveling legs of the 2nd case until the bolt holes align with the mating holes in the joining case.
- 5. Push the units together so that the through bolts go through the case to be joined.
- 6. Using the hardware provided (1/4-20 screw, washer, lock washer), screw the 2nd case with the unfinished end into the first case.

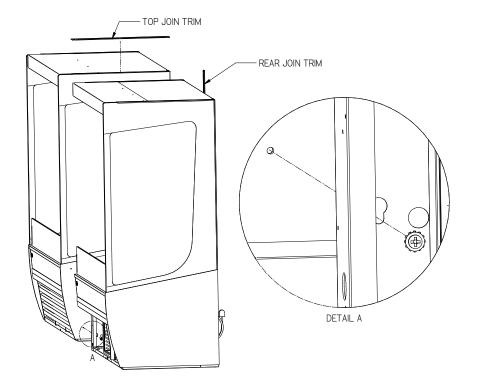



7. Finish the joining process loosening the glass trim on the case to slide the joining trim over the existing trim and secure with the existing fasteners. Do this for both the top trim and the rear trim.

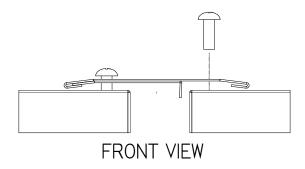

8. Replace any panels previously removed. Units are now joined.

(7) FEATURE OVERVIEW

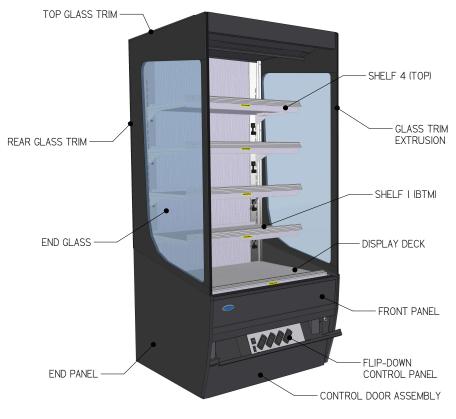


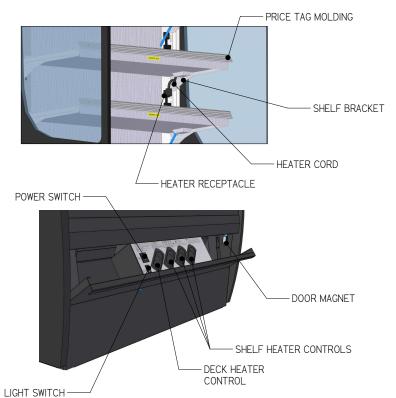


(8) SHELVING INSTALLATION AND REMOVAL

8.1 SHELF BRACKETS AND SUPPORTS

Follow the instructions shown in the diagram below to install shelf brackets. Follow the "LEVEL" path if you want shelves to have no tilt or follow the "SLANTED" path if you want shelves with tilt. Ensure brackets are well seated and face the proper direction.

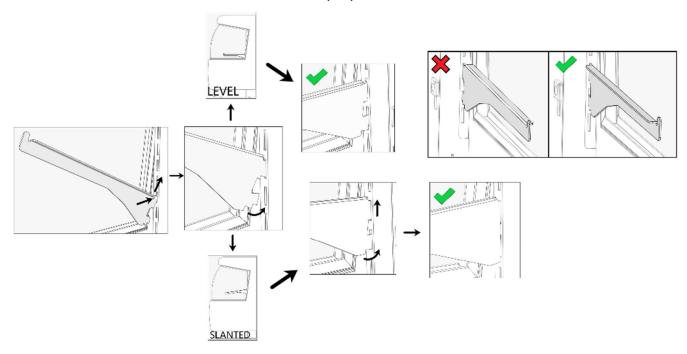


Lay back of shelf across both brackets. Slide it to the rear and then lay the front of the shelf down. Check that the retaining tab of the shelf brackets protrudes through the slot in the shelf.

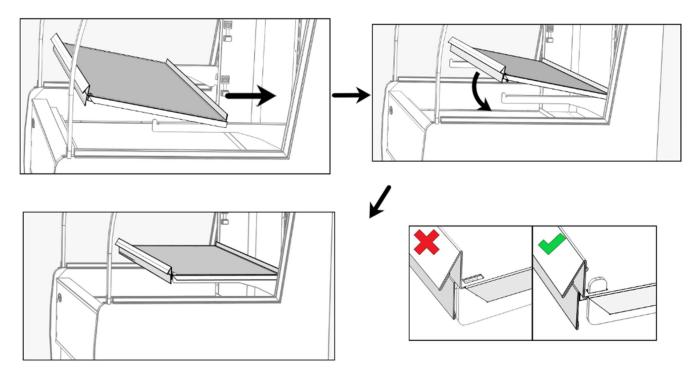


Make the heater connections from the back of the shelf into the receptacle of the vertical frame of the unit. Remove the receptacle cap and push the heater cord (the heater cord comes out of the left side of the shelf) into the nearest heater receptacle. The cord will only insert in one direction as shown below.

Once power is applied to the display case you will be able to check if the cord connection has been adequately made.


Tip: If the rear of the unit is accessible, it may be easier to remove the rear panel and make this connection from the back of the case.

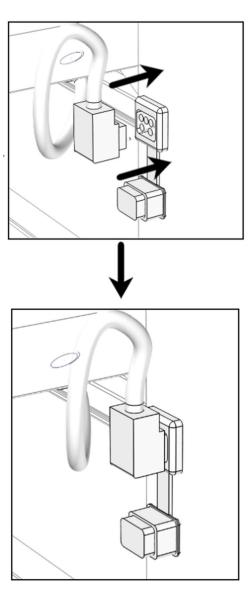


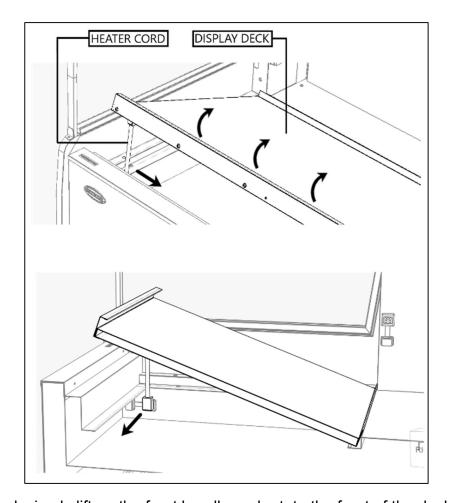

To remove the deck simply lift on the front handle and rotate the front of the deck upward. Hold the assembly in place and use your other hand to disengage the heater cord from the tub. Then simply lift the deck from the unit. Installation is the reverse of removal.

(9) SLIDE-IN LEG & CASTER ADJUSTMENTS

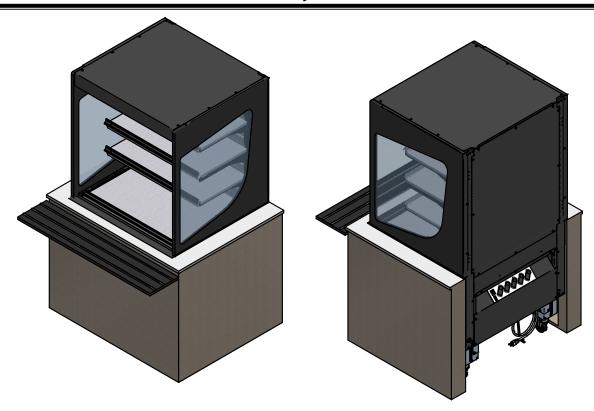

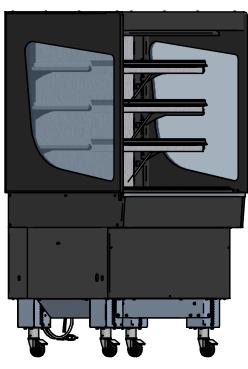

Slide In Models

Designed to slide/roll into a counter with an open back.

Hot cases are available with rear mounted controls only.

Case counter height is set at 34" from the factory.

Leg assemblies are adjustable in 1/4" increments.

Adjustable casters have 1" of upward adjustment to fine tune height to match counter surfaces.


Casters are double locking in swivel and roll directions.


The next page shows common counter height adjustments.

IMPORTANT

CASE MUST BE LIFTED AND SECURED TO ADJUST CASTER/LEG ASSEMBLIES. ***WARING***

FAILURE TO DO SO CAN CAUSE SEVERE INJURY OR DEATH.

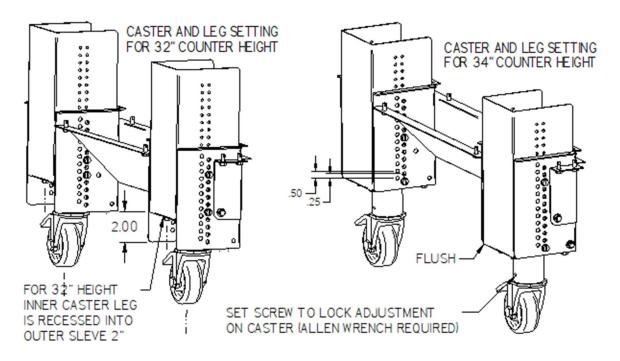

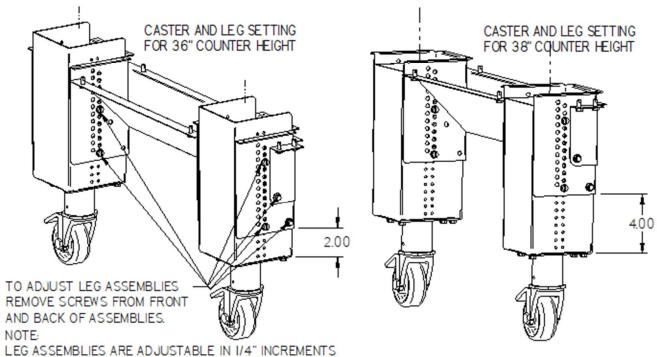

"IMPORTANT"

CASE MUST BE LIFTED AND SUPPORTED WHEN ADJUSTING CASTERT LEG ASSEMBLIES.

"WARNING"

FAILURE TO DO SO CAN CAUSE INJURY OR DEATH.

CASTERS HAVE I" OF UPWARD ADJUSTMENT.

NOTE: some leg adjustments can be done before the case is removed from the pallet

(10) CONTROL OPERATION


ANOTICEA

Load items at 170°F or warmer. At time of loading, items stocked in unit MUST be preheated at 170°F or warmer.

The controls are found behind the front panel pictured below. Pull forward on the short handle of the flip down panel and gently rotate the panel down and let it rest on the toe kick. This exposes the control panel. You now have access to the main power switch, light switch, and the heating controls.

CONTROL	PURPOSE
POWER ON/OFF	POWER ENTIRE UNIT OFF OR ON; TURNS OFF ALL LIGHTS, HEATERS, AND CONTROLS
LIGHTS ON/OFF	TURN ALL LIGHTS ON OR OFF
TOP SHELF	
MIDDLE SHELF 2	
MIDDLE SHELF 1	CHANGE SHELF TEMPERATURE SETPOINT AND TURN SHELF ON OR OFF
BOTTOM SHELF	
DECK	

Use the following procedure to adjust the control setpoints.

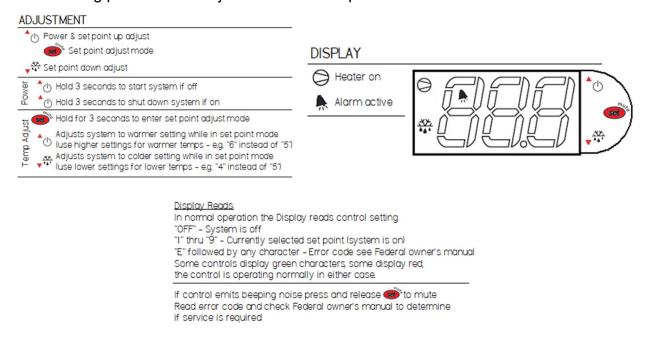

Error code E0=Temperature probe disconnected or failed.

The temperature controllers each reference one temperature probe that is mounted in the deck or shelf depending on the control. Do not locate the probe to a different position.

Shelf temperature settings are digitally controlled via factory settings 1-9. Setting "1" provides the coolest surface temperatures while setting "9" will provide the warmest.

	Control Setting	Food Reccomendations
Coolest	1	Cookies, Pastries, Non-perishables
	2	
	3	
	4	
	5	Sandwiches
	6	
	7	
	8	Rotisserie Chicken, Pizza, Fries
Warmest	9	

(11) FOOD PACKAGING RECOMMENDATIONS

This merchandiser is designed to be used with pre-packaged product only. All food items placed in the merchandiser must be packaged. No foods should be placed in the merchandiser without packaging.

ANOTICEA

Load items at 170°F or warmer. At time of loading, items stocked in unit MUST be preheated at 170°F or warmer.

Not all packaging is compatible with this merchandiser. Any packaging material with a rating of less than 250°F should not be used.

Typically, polypropylene (recycle code 5) works well, but check with the manufacturer first to get an accurate assessment of the application.

A	DO NOT USE the following packaging materials:
Recycle Code	Material Name
PET	Polyethylene terephthalate
PE-HD	High-density polyethylene
PVC	Polyvinyl chloride
PE-LD	Low-density polyethylene

Materials listed in the table above will not survive the high temperature conditions of this merchandiser.

(12) CLEANING INSTRUCTIONS

12.1 DAILY CLEANING

The case should be cleaned thoroughly, as described in the weekly cleaning section before it is used for the first time.



NOTICE:

Avoid splashing or soaking any electrical components with water to prevent electrical damage to the case.



NOTICE:

Shut off power switch and remove all product from case. Allow enough time for the unit to reach room temperature before proceeding with cleaning.



NOTICE:

Remove all product from case before proceeding with cleaning procedure.



NOTICE:

This case is not designed to be cleaned by flushing.

Note: For major spills or foreign material buildup perform the weekly cleaning instructions.

Note: Detergents are not recommended and do not use abrasive cleaners or pads to prevent scratching of surfaces.

- 1. Clean all foreign materials from the door opening.
- 1. Wipe complete interior of both the upper & lower areas of case using a damp cloth.
- 2. The remaining exterior surface should be wiped down using any ammoniated cleaners or soapy warm water.

12.2 WEEKLY CLEANING

This procedure is recommended on a weekly basis. It may need to be performed more often if necessary, to maintain a clean, sanitary case. The case should be cleaned to this procedure before using the first time.



NOTICE:

Avoid splashing or soaking any electrical components with water to prevent electrical damage to the case.



NOTICE:

Shut off power switches and remove all product from case. Allow enough time for the unit to reach room temperature before proceeding with cleaning.



NOTICE:

Remove all product from case before proceeding with cleaning procedure.



NOTICE:

This case is not designed to be cleaned by flushing.

- 1. Side, and rear door glass can be cleaned with common window cleaners.
- 2. Remove interior shelving and display deck from unit as described in the "Shelving Installation and Removal" section of this manual.
- 3. Clean all shelves, shelf supports, shelf light deflectors, shelf brackets, shelf standards using warm soapy water and a brush. Rinse thoroughly and allow to dry.
- 4. Remove the display deck and clean using warm soapy water and a brush. Rinse thoroughly and allow to dry.
- 5. Clean the entire interior of the case using warm soapy water. Wipe off all soapy water with a damp cloth and allow to dry. (DO NOT use solvents such as Acetone, Benzene, Carbon Tetrachloride, and Lacquer Thinners)
- 6. Reassemble all components in reverse order.
- 7. The exterior surfaces should be wiped down using any ammoniated cleansers or warm soapy water.

(13) SERVICE

Service Information

WARNING

RISK OF ELECTRIC SHOCK

DISCONNECT POWER BEFORE SERVICING UNIT

Before any service work is performed on the case, make sure all power is disconnected to the case.

To find a service company in your area, please visit our website at https://federalind.com/support-service/service-rep-locator. There you can also find self-service tools to help you get the answers you need faster!

For warranty service requests and all technical support, including compressors and other service parts please contact:

- Phone: (833) 238-8168

- Email: techservice@partstown.com



Federal Industries has partnered with Parts Town for ALL Non-Warranty Part Identification, Pricing, Lead Times, Orders & Freight Quotes. Please contact Parts Town directly if you need parts:

- Website: PartsTown.com

- **Email:** CustomerService@PartsTown.com

- Phone: 833-809-8188

(14) SALE & DISPOSAL

14.1 OWNER RESPONSIBILITY

If you sell or give away your Federal Industries case you must make sure that all safety labels and the Installation-Service Manual are included with it. If you need replacement labels or manuals, Federal Industries will provide them free of charge. Contact the customer service department at Federal Industries at (800) 356-4206.

The customer service department at Federal Industries should be contacted at the time of sale or disposal of your case so records may be kept of its new location.

(15) TROUBLESHOOTING

Pre-Service Checklist

You may avoid the cost and inconvenience of an unnecessary service call by first reviewing this checklist of frequently encountered situations that can cause unsatisfactory case performance.

Case Does Not Operate

Check for disconnected power supply.

Check for tripped breaker on blown fuse.

Check that the thermostat display is on and is not displaying an error.

Lights Do Not Operate

Check that light switch is on.

Check for tripped breaker or blown fuse.

Check that light cords are plugged in correctly to sockets. Check connector on LED light, and connector on

Temperature is too low

Increase control setpoint

Check supply voltage to case is above 208V

Look for HVAC discharge vents, fans, and other possible air disruptions.

If using rack, check rack orientation. Flip rack over if needed so product is closer to the shelf surface.

Temperature is too high

Turn down control setpoint

Check the control for errors and contact service

Use supplied food rack to reduce heat intensity on food

Control Error


Turn the main power switch to off to power down the unit

Wait 10s, and power the unit back on


If error is still present, ensure all heater cords are seated fully into their receptacles.

(16) WIRING DIAGRAMS

16.1 VHSS2460, VHSS3660, VHSS4860, VHSS2478, VHSS3678

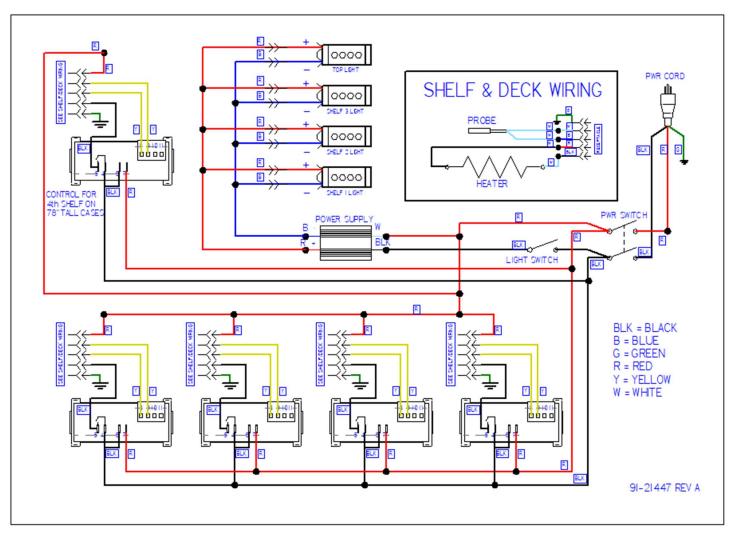

16.2 VHSS4878

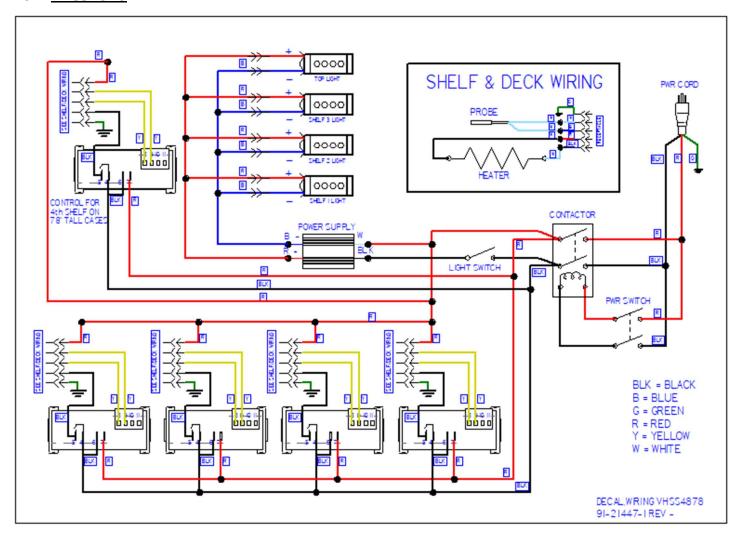

(17) VHSS SERVICE PARTS

	Heated Shelves and Deck										
Model	Shelf Part#	Deck Part#	LEFT SHELF BRACKET	RIGHT SHELF BRACKET	CAUTION HOT STICKER						
VHSS2460	SA6035-S	SA6041-S	67-21204-L	67-21204-R	91-10207						
VHSS3660	SA6035-1S	SA6041-1S	67-21204-L	67-21204-R	91-10207						
VHSS4860	SA6035-2S	SA6041-2S	67-21204-L	67-21204-R	91-10207						
VHSS2478	SA6035-S	SA6041-S	67-21204-L	67-21204-R	91-10207						
VHSS3678	SA6035-1S	SA6041-1S	67-21204-L	67-21204-R	91-10207						
VHSS4878	SA6035-2S	SA6041-2S	67-21204-L	67-21204-R	91-10207						

	ELECTRICAL										
				LED		WIRE	WIRE			RELAY,DPST-	
	TEMPERATURE	POWER	LIGHT	POWER	POWER	HARNESS,	HARNESS,	HARNESS,	RECEPTACLE,	NO 30AMP	
Model	CONTROLS	SWITCH	SWITCH	SUPPLY	CORD	CONTROL	HEATER	LIGHTS	HEATER	240V	
VHSS2460	32-19865-16	41-18186	41-11066	39-20986	43-17839	43-21534	43-21098	43-21009	43-21100	=	
VHSS3660	32-19865-16	41-18186	41-11066	39-20986	43-17839	43-21534	43-21098	43-21009	43-21100	-	
VHSS4860	32-19865-16	41-18186	41-11066	39-20986	43-19090	43-21534	43-21098	43-21009	43-21100	-	
VHSS2478	32-19865-16	41-18186	41-11066	39-20986	43-17839	43-21534	43-21098	43-21009	43-21100	-	
VHSS3678	32-19865-16	41-18186	41-11066	39-20986	43-19090	43-21534	43-21098	43-21009	43-21100	=	
VHSS4878	32-19865-16	41-18186	41-11066	39-20986	43-20234	43-21534	43-21098	43-21009	43-21100	41-21577	

CONTROL PANEL ASSEMBLY (SEE ELECTRICAL FOR CONTROLS)									
	INSTRUCTION	DOOR	HINGE	HINGE	PLASTIC				
Model	DECAL	MAGNET	RIVET	BUSHING	RIVET				
VHSS	91-21417	56-17636	77-12280	81-21489	77-21488				
/HSS-SLD	91-21417								

·	<u>LED LIGHTS</u>										
Model	TOP LIGHT	SHELF LIGHT	LED LIGHT CORDS, SHELF	LED LIGHT CORDS, TOP LIGHT	LED MOUNTING CLIP	SHELF LIGHT CORD CLIP					
VHSS2460	42-20871-20C35	42-20871-18C35	43-21333	43-20862-1B	67-20869-30	67-20952					
VHSS3660	42-20871-30C35	42-20871-25C35	43-21333	43-20862-1B	67-20869-30	67-20952					
VHSS4860	42-20871-42C35	42-20871-38C35	43-21333	43-20862-1B	67-20869-30	67-20952					
VHSS2478	42-20871-20C35	42-20871-18C35	43-21333	43-20862-1B	67-20869-30	67-20952					
VHSS3678	42-20871-30C35	42-20871-25C35	43-21333	43-20862-1B	67-20869-30	67-20952					
VHSS4878	42-20871-42C35	42-20871-38C35	43-21333	43-20862-1B	67-20869-30	67-20952					

GLASS END PANELS VISION										
	LEFT	RIGHT								
END GLASS PA	ANELS SQUARE CLEAF	R 60" TALL								
BLACK	50-21330-2B	50-21330-2B								
END GLASS PA	ANELS SQUARE REFLE	CTIVE 60" TALL								
BLACK	50-21330-12LB	50-21330-12RB								
END GLASS PA	ANELS SQUARE CLEAF	R 78" TALL								
BLACK	50-21330-1B	50-21330-1B								
END GLASS PANELS SQUARE REFLECTIVE 78" TALL										
BLACK	50-21330-11LB	50-21330-11RB								
END GLASS PA	ANELS CURVED CLEAF	R 60" TALL								
BLACK	50-21299-2B	50-21299-2B								
END GLASS PA	ANELS CURVED REFLE	CTIVE 60" TALL								
BLACK	50-21299-12LB	50-21299-12RB								
END GLASS PA	ANELS CURVED CLEAF	R 78" TALL								
BLACK	50-21299-1B	50-21299-1B								
END GLASS PA	ANELS CURVED REFLE	CTIVE 78" TALL								
BLACK	50-21619-11LB	50-21619-11RB								


END PANELS SLIDE-IN											
	LEFT	RIGHT									
END GLASS PANELS SQUARE CLEAR											
BLACK	50-21605-2B	50-21605-2B									
END GLASS PANELS SQUARE REFLECTIVE											
	50-21605-12LB	50-21605-12RB									
	END GLA	SS PANELS CURVED CLEAR									
BLACK	50-21619-2B	50-21619-2B									
	END GLASS	PANELS CURVED REFLECTIVE									
	50-21619-12LB	50-21619-12RB									
END PA	ANELS FOR SOLID END	STRAIGHT PROFILE LAMINATED, 60IN HEIGHT									
BLACK	68-21623-23L	68-21623-23R									
WHITE	68-21623-26L	68-21623-26R									
		-									
END P	ANELS FOR SOLID END	CURVED PROFILE LAMINATED, 60IN HEIGHT									
BLACK	68-21622-23L	68-21622-23R									
WHITE	68-21622-26L	68-21622-26R									

LEGS AND CASTERS		
Description	PART#	QTY/CASE
LEG LEVELER ASSEMBLY	SA4368-1	4
LEG LEVELER	65-21273	4
HOUSING	SA4295	4
6" LEG ASSEMBLY	SA4368-2	4
6" LEG	65-12886	4
SCREW, 1/4-20	75-10948	16
HOUSING	SA4295	4
4" CASTER ASSEMBLY	SA4368-3	4
4" CASTER	65-10675	4
SCREW, 1/4-20	75-10948	16
HOUSING	SA4295	4
2.5" CASTER ASSEMBLY	SA4368-20	4
2.5" CASTER	65-15185	4
SCREW, 1/4-20	75-10948	16
HOUSING	SA4295	4
RECESSED CASTER ASSEMBLY	SA4368-4	4
2.5" CASTER	65-17352	4
SCREW, 1/4-20	75-10948	16
HOUSING	M15895-2	4
6" SEISMIC LEG ASSEMBLY	SA4368-13	4
6" SEISMIC LEG	65-19069	4
SCREW, 1/4-20	75-10948	16
HOUSING	SA4295	4
SLIDE -IN ADJUSTABLE CASTER A	ASSEMBLIES	4
ADJUSTABLE CASTERS SLIDE-IN	65-21657	4
SCREW, 1/4-20	75-10948	64
INNER SLIDE HOUSING	M21799	4
OUTER SLIDE HOUSING	M21798	4
BRACE SLIDE HOUSING	M21814	2

(18) OPTIONS

18.1 REAR SWINGING DOOR

	828/829-9	9640-INTB BL	ACK INTERIOR	PARTS REA	R SWIN	G DOOR	VHSS/VNSS2460/2478
ITEM	PART # 828-9640 VHSS2460		PART # 829-9640 VHSS2478	QTY 829-9640 VHSS2478		COLOR DESIG.	DESCRIPTION
4	75-11483	12	75-11483	12	INT	В	SCREW,8-18X5,PH TR,TEK2,410SS
Ш	M2I576-IILB	1	M2I576-ILB	- 1	INT	В	LINER,DOOR SIDE
12	M2I576-IIRB	1	M2I576-IRB	- 1	INT	В	LINER,DOOR SIDE
13	M2I577-5B	- 1	M2I577-5B	- 1	INT	В	LINER,DOOR TOP
14	M2I577-B	1	M2I577-B	- 1	INT	В	LINER,DOOR BOTTOM
	828/829-	9640-INTW V	HITE NTERIOR	PARTS REAF	RSWING	DOOR V	VHSS/VNSS2460/2478
ITEM	PART # 828-9640 VHSS2460	QTY 828-9640 VHSS2460	PART # 829-9640 VHSS2478	QTY 829-9640 VHSS2478		COLOR DESIG.	DESCRIPTION
4	75-11483	12	75-11483	12	INT	W	SCREW,8-18X.5PH TR,TEK2,410SS
Ш	M2I576-IILW	1	M2I576-ILW	- 1	INT	W	LINER,DOOR SIDE
12	M2I576-IIRW	- 1	M21576-IRW	- 1	INT	W	LINER,DOOR SIDE
13	M2I577-5W	1	M2I577-5W	- 1	INT	W	LINER,DOOR TOP
14	M2I577-W	- 1	M21577-W		INT	W	LINER,DOOR BOTTOM
	828/829	-9640-INTS	S/S INTERIOR F	PARTS REAR	SWING	DOOR VI	HSS/VNSS2460/2478
ITEM	PART # 828-9640 VHSS2460	QTY 828-9640 VHSS2460	PART # 829-9640 VHSS2478	QTY 829-9640 VHSS2478	DESIG.	COLOR DESIG.	DESCRIPTION
4	75-11483	12	75-11483	12	INT	S	SCREW,8-18X.5,PH TR,TEK2,410SS
Ш	M2I576-IILS	1	M2I576-ILS	- 1	INT	S	LINER,DOOR SIDE
12	M2I576-IIRS		M2I576-IRS	1	INT	S	LINER,DOOR SIDE
13	M2I577-5S	1	M2I577-5S	- 1	INT	S	LINER,DOOR TOP
14	M2I577-S		M2I577-S		INT	S	I INFR DOOR BOTTOM

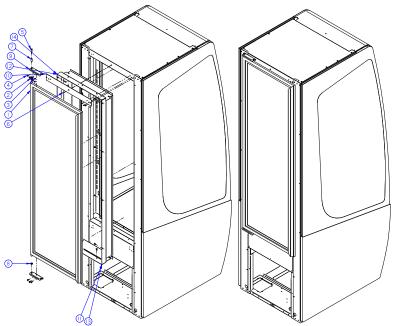


18.2 REAR SLIDING DOORS

					The state of the state of the state of		SOUTH AND ISSUED	1	F. 40- 1	-	many a size of 7 of size		AR DOO		ALC: 4000 1 1 400 1	7	_		
TEM	PART # 830-9630 VHSS/VNSS3660		PART # 831-9630 VHSS/VNSS3678		PART # 832-9630 VHSS/VNSS4860		PART # 823-9630 VHSS/VNSS4878		PART # 824-9630 VNSS8060	OTY	PART # 825-9630 VNSS6078		PART # 826-9630 VNSS7260		PART # 827-9630 WNSS7260			COLOR DESIG	DESCRIPTION
5	75-11483	11	75-11483	11	75-11463	11	75-11483	11	75-11483	- 11	75-11483	11.	75-H 483	11.	75-11483	31	INT	В	SCREW,8-18X.5,FH TR TEK2,410 SS
6	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	INT	В	SCREW, 10-16XI/2 TK2 PH PN BK
7	M21576-HLB	1	M21576-ILB	1	M21576-HLB	1	M21576-ILB	1	M21576-IILB	1	M21576-ILB	1	M21576-HLB	1	M21576-ILB	-1	INT	В	LINERDOOR SIDE
8	M21576-I1RB	1	M21576-IRB	1	M21576-I1RB	1	M21576-IRB	1	M21576-IIRB	1	M21576-IRB	1	M21576-IIRB	1.	M21576-IRB	1	INT	В	LINERDOOR SIDE
9	M21577-IB	1	M21577-IB	.1	M21577-2B	1	M21577-2B	1	M21577-3B	1	M21577-3B	1	M21577-4B	1	M21577-4B	1	INT	В	LINERDOOR BOTTOM
10	M21577-6B	1	M21577-6B	1	M21577-7B	1	M21577-7B	1	M21577-8B	1	M21577-88	21	M21577-9B	15	M21577-9B	1	INT	В	LINERDOOR TOP

					IIA I ELVIC)T	PARTS V	П.	2211125) 3	PLIDING	KE	AR DUC	11	2 MULLE				
TEM	PART # 830-9630 VHSS/VNSS3660	307	PART # 831-9630 VHSS/VNSS3678	360)	PART # 832-9630 VHSS/VNS54860	San	PART # 823-9630 VHSS/VNSS4878	7	PART # 824-9630 VNSS6060		PART # 825-9630 VNSS6078	339.0	PART # 826-9630 VNSS7260	QTY	PART # 827-9630 VNSS7260	QTY		COLOR DESIG	DESCRIPTION
5	75-11483	.11	75-11483	33	75-11483	-11	75-11483	11	75-11483	11.	75-11483	11	75-11483	.11	75-11483	11	INT	W	SCREW,8-18X.5,PH TR,TEK2,410SS
6	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	INT	W	SCREW) 0-16x1/2 TK2 PH PN BK
7	M21576-IJLW	1	M21578-ILW	1	M21576-HLW	1	M21576-ILW	1	M21576-IILW	1	M21576-ILW	1	M21576-11LW	1	M21576-ILW	1	INT	W	LINERDOOR SIDE
8	M21576-HRW	1	M21576-IRW	1	M21576-HRW	100	M21576-IRW	1	M21576-11RW	1	M21576-IRW	-1	M21576-11RW	1	M21576-IRW	1	INT	W.	LINERDOOR SIDE
9	M21577-IW	1	M21577-IW	1	M21577-2W	1	M21577-2W	1	M21577-3W	1	M21577-3W	- 1	M21577-4W	- 1	M21577-4W	1.1	INT	W	LINERDOOR BOTTOM
10	M21577-6W	.1	M21577-6W	. 1	M21577-7W	1	M21577-7W	.1	M21577-8W	.1	M21577-8W	1	M21577-9W	1	M21577-9W	1.	INT	W	LINERDOOR TOP

					INTER	10	R PARTS	V	HSS/VNS	S	SLIDING) F	REAR DO	OF	RS S/S				
TEM	PART # 830-9630 VHSS/VNSS3660		PART # 831-9630 VHSS/VNSS3678		PART # 832-9630 VHSS/VNSS4860	3000	PART # 823-9630 VHSS/VNSS4878	-	PART # 824-9630 VNSS6060		PART # 825-9630 VNSS6078	QTY	PART # 826-9630 VNSS7260		PART # 827-9630 VNSS7260	ary		COLOR DESIG	DESCRIPTION
5	75-11483	-11	75-11483	11	75-11483	11	75-11483	11	75-11483	11	75-11483	- 11	75-11483	- 11	75-11483	-11	INT	S	SCREW,8-18X.5,PH TR/TEK2,410SS
6	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	75-12732	3	INT	5	SCREWJ 0-16XI/2 TK2 PH PN BK
7	M21576-HLS	1	M21576-ILS	1	M21576-HLS	1	M21576-ILS	1	M21576-11LS	1	M21576-IL5	1	M21576-11LS	1	M21576-ILS	1	INT	S	LINERDOOR SIDE
8	M21576-HRS	-1	M21576-IRS	1	M21576-11RS	1	M21576-IRS	1	M21576-HRS	1	M21576-IRS	1	M21576-HRS	1	M21576-IRS	1	INT	5	LINERDOOR SDE
9	M21577-IS	1	M21577-15	1.	M21577-2S	1	M21577-2S	15	M21577-35	1	M21577-35	1	M21577-45	1	M21577-4S	1	INT	S	LINERDOOR BOTTOM
10	M21577-6S	1	M21577-65	1	M21577-7S	1	M21577-75	1	M21577-85	1	M21577-85	1	M21577-95	1	M21577-95	1	INT	S	LINERDOOR TOP

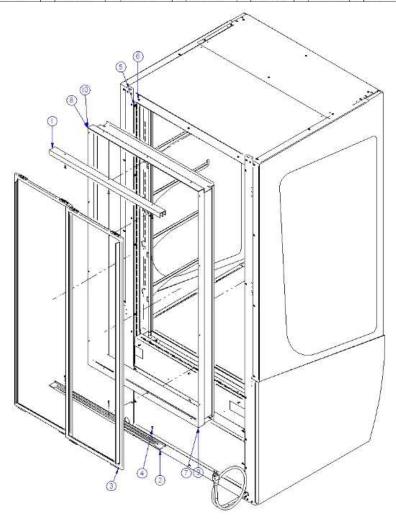

REV	CHANGE RECORD	APP'D	DATE	ECN#
-	INITIAL RELEASE	JTR	11/16/21	-
Α	Added quick start guide, and made corrections	JTR	12/8/21	-
В	Separated quick start guide	JTR	12/21/21	3763
С	Added VHSS4878 case info & updated 91-21447 diagram to Rev A	ADC	7/13/2022	3778
D	Added EO error code, wire harness control 43-21534 was 43-21093	SES	10/4/22	3813
E	Added slide-in	BJW	8/8/23	3870
F	Updated Joining Kit	BJW	02/02/24	3898

California Residents Only. MARNING

This product can expose you to chemicals including chromium which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to

E3981 VHSS 34

www.P65Warnings.ca.gov