


## OVEN CLEARANCES

- Allow at least 2" (5.1 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.
- There is not an installation clearance requirement for the back of the oven.
- Allow at least 1" (2.54 cm) of clearance around sides of oven.
- Install oven so oven bottom is at least 3 feet (91.5 cm) above floor.

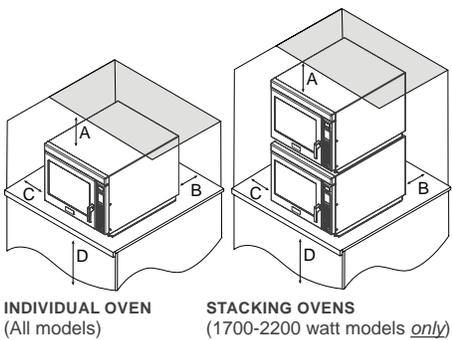

## CONTROL PANEL FEATURES

- USB Port**
- Display**
- UP keypad**
- DOWN keypad**
- QUANTITY keypad**
- MENU keypad**
- Number keypads**
- STOP/RESET keypad**
- START/OK keypad**




## MENU SCREENS

### Page 1

- Edit Recipe**
- Manual Cook**
- Date/Time**
- User Options**
- Load File**

### Page 2

- Service Mode**

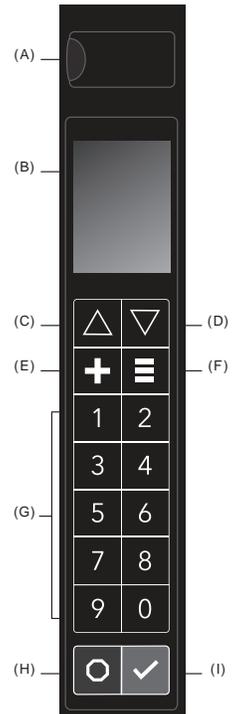

## So...how do I use it?

### Preset Recipe Keypads

To heat using a preset recipe.

From READY or DOOR OPEN screen:

- Open oven door, place food in oven, and close oven door.
  - To add additional servings press QUANTITY (+) keypad.
- Press desired number keypad(s).
- Oven operates and time counts down.
- At the end of the cooking cycle, the oven beeps. Carefully remove food from oven.



### 2 Manual Cooking

Allows operator to heat without changing the preset recipe keypads. From READY or DOOR OPEN screen:

- Open oven door, place food in oven, and close door.
- Press MENU (≡) keypad. MENU screen will display.\*
- Press number "2" keypad to access "Manual Cook".
- To navigate to editable fields:** Press UP/DOWN (▲▼) keypads. Active field will be highlighted in red. Editable fields include: Cook Time; % Microwave Power Level (0-100% in 10% increments); and Add a Stage.
- Press number keypads to enter desired settings per field.
- To add additional cooking stages:** Press DOWN (▼) keypad until "+ STAGE" is highlighted. Repeat steps 4-6.
- Press START/OK keypad to begin cooking.
- At the end of the cooking cycle, the oven beeps. Carefully remove food from oven.



### 1 Edit or Create New Recipes

Allows the operator to edit or create new preset recipes for customized cooking.


- Press MENU (≡) keypad. MENU screen will display.\*
- Press number "1" keypad to access "Edit Recipe".
- Press number keypad(s) to open the desired recipe/folder location.
- To navigate to editable fields:** Press UP/DOWN (▲▼) keypads. Active field will be highlighted in red. Editable fields include: Recipe Name; Cook Time; % Microwave Power Level (0-100% in 10% increments); and Add a Stage.
- Press number keypads to enter desired settings per field.
- To add additional cooking stages:** Press DOWN (▼) keypad until "+ STAGE" is highlighted. Repeat steps 4-6.
- To save and exit:** Press START/OK keypad.
- To discard changes:** Press STOP/RESET keypad.

\*Note: If PIN Code is enabled, your unique 4 digit pin code will be required to access Menu Screen


# Quick Start Guide

Refer to Owner's Manual for Safety Statements. Complete Owner's Manual available online.

Refer to Owner's Manual for complete care and cleaning instructions.

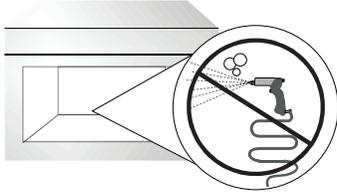

**DO NOT** power spray

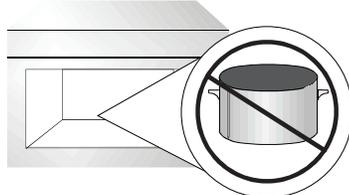

**No metal pans**

**⚠ Do NOT** use abrasive cleaners or cleaners containing ammonia, citrus, phosphates, chlorine, sodium or potassium hydroxide (lye). Use of unapproved cleaning agents will void the terms of the warranty.

## 4

### Access and Modify User Options

There are several options you can change to customize the operation of the oven. Options are shown below. **The factory setting is shown in bold type.**

1. Press MENU (≡) keypad.  
**Note:** If PIN Code is enabled, your unique 4 digit pin code will be required.
2. Press number "4" keypad to access "User Options".
3. To scroll between pages of settings: Press UP/DOWN (▲▼) keypads.
4. To access available options for a setting: Press corresponding number keypad.
5. To change a setting: Press corresponding number keypad.
6. **To save changes:** START/OK keypad.
7. **To exit:** Press STOP/RESET keypad.

### CLEAN FILTER REMINDER

This oven displays "Clean Filter Reminder" at user defined intervals. When the message displays, ACP recommends cleaning the air filter thoroughly. Refer to Owner's Manual for complete cleaning instructions.

Cleaning the air filter will not shut off the message. The message will automatically stop displaying after 24 hours. To clear the message, Press START/OK keypad.

Air filters and vents must be cleaned regularly to prevent overheating of oven. Depending on oven use and environmental conditions, the filter may need to be cleaned more frequently. Once the frequency is determined, set the user option for the appropriate time frame.

### STANDARD DEFAULT PER MODEL (FACTORY SETTINGS IN BOLD)

Factory setting may vary by model

SETTING	DISPLAYED OPTIONS	DESCRIPTION
End of Cycle Beep	3 Seconds <b>Continuous</b> Burst	3 second continuous beep. <b>Continuous beep until door is opened.</b> 5 beep bursts until door is open.
Speaker Volume	Off Low <b>Medium</b> High	Sets volume to off. Sets volume to low. <b>Sets volume to medium.</b> Sets volume to high.
Key Beep	Off <b>On</b>	Prevents beep when keypad is pressed. <b>Allows beep when keypad is pressed.</b>
Reset on Door Open	End Cook Cycle <b>Pause Cook Cycle</b>	Cancels heating time count down after door is opened during cycle. <b>Allows oven to resume heating time countdown after door is opened during cycle.</b>
Digit Entry	<b>Single Digit</b> Double Digit Folders	<b>Allows 10 (0-9) preprogrammed recipes.</b> Allows 100 (00-99) preprogrammed recipes. Allows 10 folders (0-9), each with 10 preprogrammed recipes.
Maximum Cook Time	10 minutes <b>60 minutes</b>	Allows 10 minutes of heating time. <b>Allows 60 minutes of heating time.</b>
Keypad Enable Window	15 seconds 30 seconds <b>1 minute</b> 2 minutes	15 seconds after oven door is opened, keyboard disabled. 30 seconds after oven door is opened, keyboard disabled. <b>1 minute after oven door is opened, keyboard disabled.</b> 2 minutes after oven door is opened, keyboard disabled.
On-the-Fly Programming	<b>Off</b> On	<b>Disables pushing any additional keypads during a cook cycle.</b> Allows pushing additional keypads to add or change time in the middle of a cook cycle.
Clean Filter Reminder	Off <b>Every 7 Days</b> Every 30 Days Every 90 Days	Oven will not display "Clean Filter Message". <b>Oven will display "Clean Filter Message" every 7 days.</b> Oven will display "Clean Filter Message" every 30 days. Oven will display "Clean Filter Message" every 90 days.
PIN Code	<b>Off</b> On Set PIN Code	<b>PIN Code not required to access Menu or User Options.</b> PIN Code required to access Menu and User Options. PIN Code required. Create new 4 digit PIN Code.
Language	Chinese (Mandarin), Danish, Dutch, <b>English</b> , Filipino, French, German, Greek, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Romanian, Russian, Spanish, Swedish, Ukrainian, Vietnamese	
Quantity Prompt**	On <b>Off</b>	Prompts the user for portion quantity multiplier (1-9) upon selecting a preset recipe. <b>Allows user to cook individual portions, and/or use X2 Quantity multiplier feature.</b>

\*\* Available on select models only. (Only displayed in User Options menu if factory option is enabled)