



| Delivery | 1 |
|-----------------------------------|---|
| Unpacking | 1 |
| Safety Procedures and Precautions | 2 |

Installation

| Installation Requirements |
|--|
| Leveling |
| Clearance Requirement 3 |
| 700-RW Dimensions and Capacity 4 |
| 1100-RW Dimensions and Capacity 5 |
| Remote Control Mounting Instructions 6 |
| Electrical |
| Calibration |

Operating Instructions

| Operating Instructions | 8 |
|----------------------------|---|
| General Holding Guidelines | 9 |

Care and Cleaning

| Cleaning and Preventative Maintenance 1 | 0 |
|---|----|
| Protecting Stainless Steel Surfaces 1 | 0 |
| Cleaning Agents | 0 |
| Cleaning Materials 1 | 0 |
| Care and Cleaning 1 | 1 |
| Sanitation | 12 |

Service

| Service Parts | 13 |
|-----------------------|----|
| Electrical Components | 14 |

Wire Diagrams

Always refer to the wire diagram(s) included with the unit for most current version.

Warranty

| Transportation Damage and Claims | Back Cover |
|----------------------------------|------------|
| Limited Warranty | Back Cover |



DELIVERY

This Alto-Shaam appliance has been thoroughly tested and inspected to ensure only the highest quality unit is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. *See Transportation Damage and Claims section located in this manual.*

This appliance, complete with unattached items and accessories, may have been delivered in one or more packages. Check to ensure that all standard items and options have been received with each model as ordered.


Save all the information and instructions packed with the appliance. Complete and return the warranty card to the factory as soon as possible to ensure prompt service in the event of a warranty parts and labor claim.

This manual must be read and understood by all people using or installing the equipment model. Contact the Alto-Shaam Tech Team Service Department if you have any questions concerning installation, operation, or maintenance.

NOTE: All claims for warranty must include the full model number and serial number of the unit.

UNPACKING

- Carefully remove the appliance from the carton or crate.
 - **NOTE:** Do not discard the carton and other packaging material until you have inspected the unit for hidden damage and tested it for proper operation.

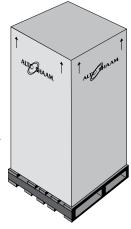

2. Read all instructions in this manual carefully before initiating the installation of this appliance.

DO NOT DISCARD THIS MANUAL. This manual is considered to be part of the appliance and is to be provided to the owner or manager of the business or to the person responsible for training operators. *Additional manuals are available from the Alto-Shaam Tech Team Service Department.*

 Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.

SAFETY PROCEDURES AND PRECAUTIONS

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. In accordance with generally accepted product safety labeling guidelines for potential hazards, the following signal words and symbols may be used throughout this manual.

DANGER



Used to indicate the presence of a hazard that WILL cause severe personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

WARNING



Used to indicate the presence of a hazard that CAN cause personal injury, possible death, or major property damage if the warning included with this symbol is ignored.

CAUTION



Used to indicate the presence of a hazard that can or will cause minor or moderate personal injury or property damage if the warning included with this symbol is ignored.

CAUTION

Used to indicate the presence of a hazard that can or will cause minor personal injury, property damage, or a potential unsafe practice if the warning included with this symbol is ignored.

NOTE: Used to notify personnel of installation, operation, or maintenance information that is important but not hazard related.

- 1. This appliance is intended to cook, hold or process foods for the purpose of human consumption. No other use for this appliance is authorized or recommended.
- 2. This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users.
- 3. Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified technical personnel.
- 4. This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.



NOTE

For equipment delivered for use in any location regulated by the following directive:

DO NOT DISPOSE OF ELECTRICAL OR ELECTRONIC EQUIPMENT WITH OTHER MUNICIPAL WASTE.

DANGER



IMPROPER INSTALLATION, ALTERATION, ADJUSTMENT, SERVICE, OR MAINTENANCE COULD RESULT IN SEVERE INJURY, DEATH, OR CAUSE PROPERTY DAMAGE.

READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

CAUTION



TO PREVENT PERSONAL INJURY, USE CAUTION WHEN MOVING OR LEVELING THIS APPLIANCE.

CAUTION

METAL PARTS OF THIS EQUIPMENT BECOME EXTREMELY HOT WHEN IN OPERATION. TO AVOID BURNS, ALWAYS USE HAND PROTECTION WHEN OPERATING THIS APPLIANCE.





5555

DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

SITE INSTALLATION

LEVELING



The heated well should be

leveled before the electrical supply

is connected. Level the appliance from side-toside and front-to-back with the use of a spirit level. For appliances installed on a mobile stand, it is important that the floor surface be level due to the probability of frequent repositioning.

NOTE

It is important to apply a food grade silicone underneath the decor flange to seal flange to the countertop.


| CLEARANCE REQUIREMENTS | | | | |
|------------------------|--------------|--|--|--|
| воттом | 6" (152mm) | | | |
| SIDES | s 6" (152mm) | | | |

The Alto-Shaam round well must be installed in a location that will permit it to function for its intended purpose and to allow adequate clearance for ventilation, proper cleaning, and maintenance access.

- **1.** The hot well must be installed on a stable and level surface.
- **2. DO NOT** install this hot well in any area where it may be affected by any adverse conditions such as steam, grease, dripping water, high temperatures, or any other severely adverse conditions.
- **3. DO NOT** store or use any flammable liquids or allow flammable vapors in the vicinity of this round well or any other appliance.
- **4.** This hot well must be kept free and clear of any combustible materials.
- 5. The outer walls of the hot well can reach 260°F (127°C). Verify countertop material temperature rating with manufacturer before installing to ensure counter can withstand heat.

DIMENSIONS . CAPACITY

700-RW

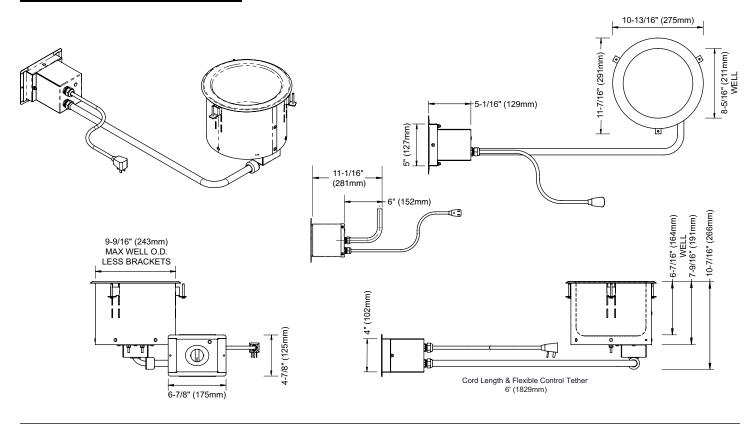


PRODUCT CAPACITY

Maximum Volume: 7 qt. (6.6 L)


| WEIGHT | | | | | |
|--------|---------------|--|--|--|--|
| Net | 10 lbs (5 kg) | | | | |
| Ship | 14 lbs (6 kg) | | | | |

| ROUGH CUT OPENINGS | | | | |
|--------------------|-----------------------------|--|--|--|
| Counter Top Cutout | 10-1/4" (260mm) Diameter | | | |
| Control Box Cutout | 5-5/16" x 4-1/2" x 11-1/16" | | | |
| | (114mm x 133mm x 281mm) | | | |

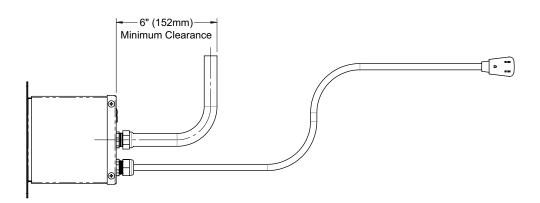

DIMENSIONS . CAPACITY

1100-RW

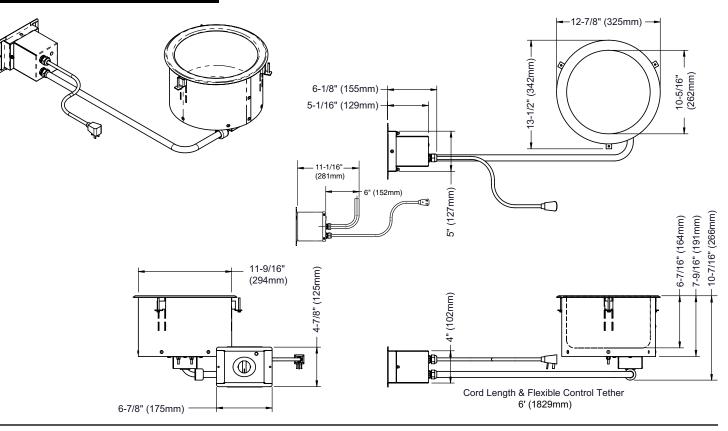


PRODUCT CAPACITY


Maximum Volume: 11 qt. (10.5 L)

| WEIGHT | | | | | |
|--------|---------------|--|--|--|--|
| Net | 13 lbs (6 kg) | | | | |
| Ship | 17 lbs (8 kg) | | | | |

| ROUGH CUT OPENINGS | | | | |
|--------------------|-----------------------------|--|--|--|
| Counter Top Cutout | 12-1/4" (311mm) Diameter | | | |
| Control Box Cutout | 5-5/16" x 4-1/2" x 11-1/16" | | | |
| | (114mm x 133mm x 281mm) | | | |

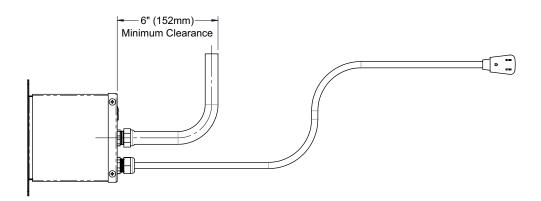

REMOTE CONTROL HOUSING MOUNTING INSTRUCTIONS

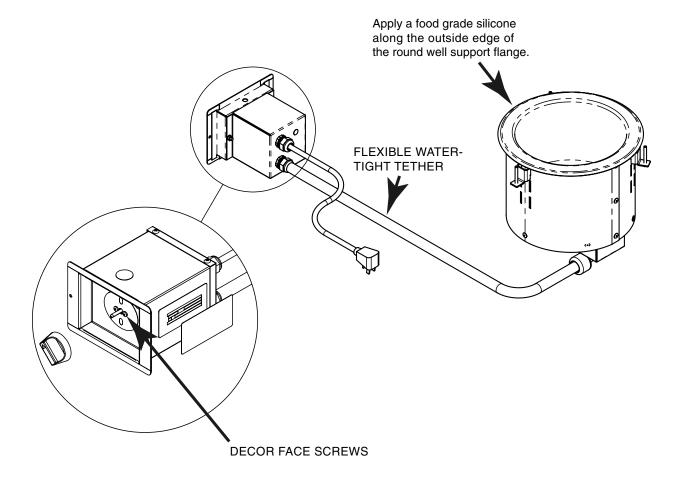

- Cut a 5-5/16" x 4-1/2" x 11-1/16" (133mm x 114mm x 281mm) opening in the location where the control is to be positioned.
- 2. Thoroughly clean and dry the mounting surface around the control cut-out opening on which the décor face will be applied.

NOTE: The control face will not properly adhere to an unclean surface.

3. Remove the knob from the thermostat by pulling knob away from control. Remove the décor face from the unit by removing one screw located to the right of the thermostat. See diagram above.

- Route control housing through opening cut in step 1. Secure the décor face housing to the control housing using the screw removed in step 3.
- 5. Remove the protective film from the mounting tape on the inside flanges of the décor face and apply the décor face to the mounting surface. Two holes are provided in décor face for additional mounting screws (not provided) if desired.
- 6. Reattach the knob to the thermostat.

ELECTRICAL

- **1.** An identification tag is permanently mounted on the appliance.
- **2.** This appliance is equipped with a three-prong grounding plug. For your protection against shock hazard this appliance should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug. Plug the unit into a properly grounded receptacle ONLY, positioning the unit so that the plug is easily accessible in case of an emergency. Arcing will occur when connecting or disconnecting the unit unless all controls are in the "OFF" position.
- **3.** Proper receptacle or outlet configuration or permanent wiring for this unit must be installed by a licensed electrician in accordance with applicable local electrical codes.
- **NOTE:** Where local codes and CE regulatory requirements apply, appliances must be connected to an electrical circuit that is protected by an external GFCI outlet.
- **NOTE:** Round Well must be installed with 15 Amp maximum overcurrent protection or equivalent.

700-RW

| ELECTI | RICAL | 1 | | | | |
|---------|-------|----------|---------|-------|--------------|--------------------|
| VOLTAGE | PHASE | CYCLE/HZ | AMPS | kW | | cord & plug |
| 120 | 1 | 50/60 | 3.8 | .45 | | NEMA 5-15 p |
| | | | | | \ <u>n</u> / | 15A- 125V plug |
| 208-240 | 1 | 50/60 | 1.6-1.9 | .3445 | (m. m.) | NEMA 6-15p |
| | | | | | 0 | 15A - 250V plug |
| 230 | 1 | 50/60 | 1.8 | .41 | Ċ | CEE 7/7 |
| | | | | | Ĩ | 220-230V plug |

1100-RW

| ELECT | RICAL | I | | | | |
|---------|-------|----------|---------|------|---------------------------|--------------------|
| VOLTAGE | PHASE | CYCLE/HZ | AMPS | kW | | cord & plug |
| 120 | 1 | 50/60 | 4.2 | .5 | $(\mathbf{I} \mathbf{I})$ | NEMA 5-15 p |
| | | | | | \ n / | 15A- 125V plug |
| 208-240 | 1 | 50/60 | 1.8-2.1 | .385 | (| NEMA 6-15 p |
| | | | | | ۲ | 15A - 250V plug |
| 230 | 1 | 50/60 | 2.0 | .46 | ŕð | CEE 7/7 |
| | | | | | Š | 220-230V plug |

DANGER

ENSURE POWER SOURCE MATCHES VOLTAGE IDENTIFIED ON APPLIANCE RATING TAG.

(C



ELECTRICAL CONNECTIONS MUST BE MADE BY A QUALIFIED SERVICE TECHNICIAN IN ACCORDANCE WITH APPLICABLE ELECTRICAL CODES.

DANGER



To avoid electrical shock, this appliance MUST be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/ NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.

CALIBRATION PROCEDURES

Every unit is calibrated at the factory. Only a qualified service technician should calibrate the unit in the field if necessary.

SHOCK RISK WARNING: Unit must be disconnected from power source before making adjustments or calibrating switch.

TOOLS REQUIRED: 2mm allen (hex) wrench

OPERATING INSTRUCTIONS

1. DO NOT ADD WATER TO ROUND WELL

Halo Heat® hot wells maintain a constant and gentle temperature. Adding water is not recommended since water will accelerate the deterioration of the product and may damage the unit voiding the warranty.

2. PREHEAT AT THE NUMBER "6" SETTING FOR A MINIMUM OF 15 MINUTES



An indicator light will illuminate

when the thermostat(s) is (are) turned "**ON**." The unit should be preheated at the **6** setting for a minimum of **15 minutes** before loading the unit with hot food pan insert (not included).

3. LOAD HOT FOODS INTO THE ROUND WELL

After preheating, place hot foods into the pan insert and place the pan insert into the heated well, or exchange the pan insert with a prefilled pan insert. This appliance is designed for the purpose of hot food holding. Only hot foods should be placed into the unit. Potentially hazardous foods should be held in the unit at setting 10. If lower settings are used, ensure the food has maintained safe food temperatures. Lower settings should be tested by user to ensure food has maintained safe food temperatures between 140° and 160°F (60° and 71°C).

Before loading food into the unit, use a pockettype thermometer to make certain all products have reached an internal temperature of 140° to 180°F (60° to 82°C). If any food product is not at proper serving temperature, use a Halo Heat cooking and holding oven, set at 250° to 275°F (121° to 135°C), or a Combitherm oven to bring the product within the correct temperature range.

5. RESET THERMOSTAT AS NEEDED

After product is loaded into the unit, it is necessary to reset the thermostat. Since proper temperature range depends on the type of products and the quantities being held, it is necessary to periodically use a pocket thermometer to check the food to make certain the correct temperatures are being maintained. Proper temperature range is between a minimum of 140° and 180°F (60° and 82°C).

6. SERVE FRESH, HOT FOOD

\$\$\$\$

Keep hot foods looking fresh. Occasionally stir or rotate food as needed. Wipe spills immediately to ensure maximum eye appeal and to ease end of day cleanup.



ALWAYS USE HAND PROTECTION WHEN OPERATING THIS APPLIANCE.

GENERAL HOLDING GUIDELINES

Chefs, cooks and other specialized food service personnel employ varied methods of cooking. Proper holding temperatures for a specific food product must be based on the moisture content of the product, product density, volume, and proper serving temperatures. Safe holding temperatures must also be correlated with palatability in determining the length of holding time for a specific product.

Halo Heat maintains the maximum amount of product moisture content without the addition of water, water vapor, or steam. Maintaining maximum natural product moisture preserves the natural flavor of the product and provides a more genuine taste. In addition to product moisture retention, the gentle properties of Halo Heat maintain a consistent temperature throughout the cabinet without the necessity of a heat distribution fan, thereby preventing further moisture loss due to evaporation or dehydration.

When product is removed from a high temperature cooking environment for immediate transfer into equipment with the lower temperature required for hot food holding, condensation can form on the outside of the product and on the inside of plastic containers used in self-service applications. Allowing the product to release the initial steam and heat produced by high temperature cooking can alleviate this condition. To preserve the safety and quality of freshly cooked foods however, a maximum of 1 to 2 minutes must be the only time period allowed for the initial heat to be released from the product.

Most Halo Heat holding equipment is provided with a thermostat control between 60° and 200°F (16° to 93°C). If the unit is equipped with vents, close the vents for moist holding and open the vents for crisp holding.

If the unit is equipped with a thermostat indicating a range of between 1 and 10, use a metal-stemmed indicating thermometer to measure the internal temperature of the product(s) being held. Adjust the thermostat setting to achieve the best overall setting based on internal product temperature.

| HOLDING TEMPERATURE RANGE | | | | |
|--|--------------|------------|--|--|
| MEAT | FAHRENHEIT | CELSIUS | | |
| BEEF ROAST — Rare | 130°F | 54°C | | |
| BEEF ROAST — Med/Well Done | 155°F | 68°C | | |
| BEEF BRISKET | 160° — 175°F | 71° — 79°C | | |
| CORN BEEF | 160° — 175°F | 71° — 79°C | | |
| PASTRAMI | 160° — 175°F | 71° — 79°C | | |
| PRIME RIB — Rare | 130°F | 54°C | | |
| STEAKS — Broiled/Fried | 140° — 160°F | 60° — 71°C | | |
| RIBS — Beef or Pork | 160°F | 71°C | | |
| VEAL | 160° — 175°F | 71° — 79°C | | |
| НАМ | 160° — 175°F | 71° — 79°C | | |
| PORK | 160° — 175°F | 71° — 79°C | | |
| LAMB | 160° — 175°F | 71° — 79°C | | |
| POULTRY | • | • | | |
| CHICKEN — Fried/Baked | 160° — 175°F | 71° — 79°C | | |
| DUCK | 160° — 175°F | 71° — 79°C | | |
| TURKEY | 160° — 175°F | 71° — 79°C | | |
| GENERAL | 160° — 175°F | 71° — 79°C | | |
| FISH/SEAFOOD | | | | |
| FISH — Baked/Fried | 160° — 175°F | 71° — 79°C | | |
| LOBSTER | 160° — 175°F | 71° — 79°C | | |
| SHRIMP — Fried | 160° — 175°F | 71° — 79°C | | |
| BAKED GOODS | | • | | |
| BREADS/ROLLS | 120° — 140°F | 49° — 60°C | | |
| MISCELLANEOUS | | • • | | |
| CASSEROLES | 160° — 175°F | 71° — 79°C | | |
| DOUGH — Proofing | 80° — 100°F | 27° — 38°C | | |
| EGGS —Fried | 150° — 160°F | 66° — 71°C | | |
| FROZEN ENTREES | 160° — 175°F | 71° — 79°C | | |
| HORS D'OEUVRES | 160° — 180°F | 71° — 82°C | | |
| PASTA | 160° — 180°F | 71° — 82°C | | |
| PIZZA | 160° — 180°F | 71° — 82°C | | |
| POTATOES | 180°F | 82°C | | |
| PLATED MEALS | 140° — 165°F | 60°— 74°C | | |
| SAUCES | 140° — 200°F | 60° — 93°C | | |
| SOUP | 140° — 200°F | 60° — 93°C | | |
| VEGETABLES | 160° — 175°F | 71° — 79°C | | |
| THE HOLDING TEMPERATURES LISTED ARE SUGGESTED GUIDELINES ONLY. ALL | | | | |

THE HOLDING TEMPERATURES LISTED ARE SUGGESTED GUIDELINES ONLY. ALL FOOD HOLDING SHOULD BE BASED ON INTERNAL PRODUCT TEMPERATURES. ALWAYS FOLLOW LOCAL HEALTH (HYGIENE) REGULATIONS FOR ALL INTERNAL TEMPERATURE REQUIREMENTS.

CLEANING AND PREVENTATIVE MAINTENANCE

PROTECTING STAINLESS STEEL SURFACES



It is important to guard against corrosion in the care of stainless steel surfaces. Harsh, corrosive, or inappropriate chemicals can completely destroy the protective surface layer of stainless steel. Abrasive

pads, steel wool, or metal implements will abrade surfaces causing damage to this protective coating and will eventually result in areas of corrosion. Even water, particularly hard water that contains high to moderate concentrations of chloride, will cause oxidation and pitting that result in rust and corrosion. In addition, many acidic foods spilled and left to remain on metal surfaces are contributing factors that will corrode surfaces.

Proper cleaning agents, materials, and methods are vital to maintaining the appearance and life of this appliance. Spilled foods should be removed and the area wiped as soon as possible but at the very least, a minimum of once a day. Always thoroughly rinse surfaces after using a cleaning agent and wipe standing water as quickly as possible after rinsing.

CLEANING AGENTS

Use non-abrasive cleaning products designed for use on stainless steel surfaces. Cleaning agents must be chloride-free compounds and must not contain quaternary salts. Never use hydrochloric acid (muriatic acid) on stainless steel surfaces. Always use the proper cleaning agent at the manufacturer's recommended strength. Contact your local cleaning supplier for product recommendations.

CLEANING MATERIALS

The cleaning function can usually be accomplished with the proper cleaning agent and a soft, clean cloth. When more aggressive methods must be employed, use a non-abrasive scouring pad on difficult areas and make certain to scrub with the visible grain of surface metal to avoid surface scratches. Never use wire brushes, metal scouring pads, or scrapers to remove food residue.



TO PROTECT STAINLESS STEEL SURFACES, COMPLETELY AVOID THE USE OF ABRASIVE CLEANING **COMPOUNDS, CHLORIDE BASED CLEANERS, OR CLEANERS** CONTAINING QUATERNARY SALTS. **NEVER USE HYDROCHLORIC ACID** (MURIATIC ACID) ON STAINLESS STEEL. NEVER USE WIRE **BRUSHES, METAL SCOURING** PADS OR SCRAPERS.

CARE AND CLEANING



The cleanliness and appearance of this appliance will contribute considerably to operating efficiency and savory, appetizing food. Good equipment kept clean works better and lasts longer.



DISCONNECT UNIT FROM POWER SOURCE BEFORE CLEANING OR SERVICING.

NOTE: Always allow the appliance to cool before cleaning.

CLEAN THE APPLIANCE DAILY.

DANGER

AT NO TIME SHOULD THE INTERIOR OR EXTERIOR BE STEAM CLEANED, HOSED DOWN, OR FLOODED WITH WATER OR LIQUID SOLUTION OF ANY KIND. DO NOT USE WATER JET TO CLEAN.



SEVERE DAMAGE OR ELECTRICAL HAZARD COULD RESULT.

WARRANTY BECOMES VOID IF APPLIANCE IS FLOODED

NOTE: Completely avoid the use of abrasive cleaning compounds, chloride-based cleaners, or cleaners containing quaternary salts. To protect metal finish on stainless steel, never use hydrochloric acid (muriatic acid).



INTERIOR:

- 1. Disconnect round well from the power source. Let unit cool.
- 2. After the round well has cooled, remove pan insert and clean separately.
- 3. Remove any food scraps.
- 4. Wipe the interior metal surfaces with a paper towel to remove any remaining food debris.
- 5. Clean interior with a damp cloth or sponge and any good commercial detergent at the recommended strength.
- 6. For baked-on food deposits, use a non-caustic and non-toxic commercial oven cleaner appropriate for the interior surface. Follow the product manufacturer's instructions carefully for the use of this product. Any commercial oven cleaner must be approved for use on food contact areas. Remove soil with the use of a plastic scouring pad.

- 7. Rinse surfaces by wiping with a clean cloth or sponge and clean warm water.
- 8. Remove excess water with a sponge and wipe dry with a clean cloth or air dry. Leave area open until interior is completely dry. Replace pan insert.
- Interior can be wiped with a sanitizing solution after cleaning and rinsing. This solution must be approved for use on stainless steel food contact surfaces.

DO NOT USE ABRASIVE CLEANING COMPOUNDS.

Always follow appropriate state or local health (hygiene) regulations regarding all applicable cleaning and sanitation requirements for food service equipment.

SANITATION

Food flavor and aroma are usually so closely related that it is difficult, if not impossible, to separate them. There is also an important, inseparable relationship between cleanliness and food flavor. Cleanliness, top operating efficiency, and appearance of equipment contribute considerably to savory, appetizing foods. Good equipment that is kept clean, works better and lasts longer.

Most food imparts its own particular aroma and many foods also absorb existing odors. Unfortunately, during this absorption there is not distinction between GOOD and BAD odors The majority of objectionable flavors and odors troubling food service operations are caused by bacteria growth. Sourness, rancidity, mustiness, stale or other OFF flavors are usually the result of germ activity.

The easiest way to insure full, natural food flavor is through comprehensive cleanliness. This means good control of both visible soil (dirt) and invisible soil (germs). A through approach to sanitation will provide essential cleanliness. It will assure an attractive appearance of equipment, along with maximum efficiency and utility. More importantly, a good sanitation program provides one of the key elements in the prevention of food-borne illnesses.

A controlled holding environment for prepared foods is just one of the important factors involved in the prevention of food-borne illnesses. Temperature monitoring and control during receiving, storage, preparation, and the service of foods are of equal importance. The most accurate method of measuring safe temperatures of both hot and cold foods is by internal product temperature. A quality thermometer is an effective tool for this purpose, and should be routinely used on all products that require holding at a specific temperature.

A comprehensive sanitation program should focus on the training of staff in basic sanitation procedures. This includes personal hygiene, proper handling of raw foods, cooking to a safe internal product temperature, nd the routine monitoring of internal temperatures from receiving through service.

Most food-borne illnesses can be prevented through proper temperature control and a comprehensive program of sanitation. Both these factors are important to build quality service as the foundation of customer satisfaction. Safe food handling practices to prevent foodborne illness is of critical importance to the health and safety of your customers.

HACCP, an acronym for Hazard Analysis (at) Critical Control Points, is a quality control program of operating procedures to assure food integrity, quality, and safety. Taking steps necessary to augment food safety practices is both cost effective and relatively simple. While HACCP guidelines go far beyond the scope of this manual, additional information is available by contacting:


CENTER FOR FOOD SAFETY AND APPLIED NUTRITION FOOD AND DRUG ADMINISTRATION 1-888-SAFEFOOD

| INTERNAL FOOD PRODUCT TEMPERATURES | | | | | | |
|------------------------------------|---------------|------------------|--|--|--|--|
| HOTFOODS | | | | | | |
| DANGER ZONE | 40° TO 140°F | (4° TO 60°C) | | | | |
| CRITICAL ZONE | 70° TO 120°F | (21° TO 49°C) | | | | |
| SAFE ZONE | 140° TO 165°F | (60° TO 74°C) | | | | |
| COLD FOODS | | | | | | |
| DANGER ZONE | ABOVE 40°F | (ABOVE 4°C) | | | | |
| SAFE ZONE | 36° TO 40°F | (2° TO 4°C) | | | | |
| FROZEN FOODS | | | | | | |
| DANGER ZONE | ABOVE 32°F | (ABOVE 0°C) | | | | |
| CRITICAL ZONE | 0° TO 32°F | (-18° TO 0°C) | | | | |
| SAFE ZONE | 0°F or below | (-18°C or below) | | | | |

SERVICE

ROUND WELL

(1100-RW sноwn)

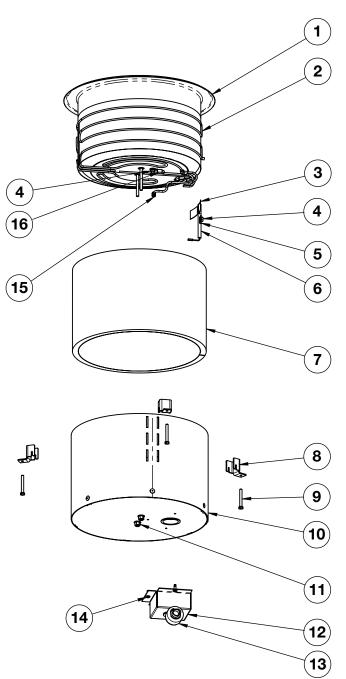


| Dout numbers and | d | a aubiaat ta | | without notion |
|------------------|-------------|--------------|--------|-----------------|
| Part numbers and | urawinys ar | | change | without notice. |

| ITEM | DESCRIPTION | PART NO. | QTY | ITEM | DESCRIPTION | PART NO. | QTY |
|------|------------------------------------|----------|-----|------|-------------------------------------|----------|-----|
| 1 | KETTLE ASSEMBLY 700-RW | 5016027 | 1 | 9 | SCREW, M5 X 0.8 X 40 MM, HEX | SC-28259 | 3 |
| | 1100-RW | 5016026 | 1 | 10 | OUTER SHEATH ASSEMBLY 700-RW | 5016315 | 1 |
| 2 | ELEMENT, FOIL PAD HEATER 700-RW | EL-35799 | 1 | | 1100-RW | 5016271 | 1 |
| | 1100-RW | EL-35798 | 1 | 11 | NUT, FLG, M6 X 1.0, LOCK, NYLON INS | NU-35842 | 2 |
| 3 | TAPE, HI-TEMP, 3/4" X 3" MAX 600°F | TA-3496 | 1 | 12 | CONDUIT BOX ASSEMBLY | 5016279 | 1 |
| 4 | NUT, HEX 5mm WITH STAR WASHER | NU-27851 | 3 | 13 | CONNECTOR FLEX NYLON SWEEP | CR-33179 | 1 |
| 5 | CLIP, RTD | 1014305 | 1 | 14 | SCREW, 8-32 X 1/2T -410PH PAN HEAD | SC-25849 | 3 |
| 6 | PROBE | PR-34494 | 1 | 15 | CONNECTOR, TERM., #10 STUD RING | CR-3226 | 2 |
| 7 | INSULATION | IN-22253 | 2 | 16 | CONNECTOR, FLEX NYLON SWEEP | CR-3754 | 1 |
| 8 | MOUNTING BRACKET | 1014216 | 3 | | | | |


SERVICE

ELECTRICAL COMPONENTS

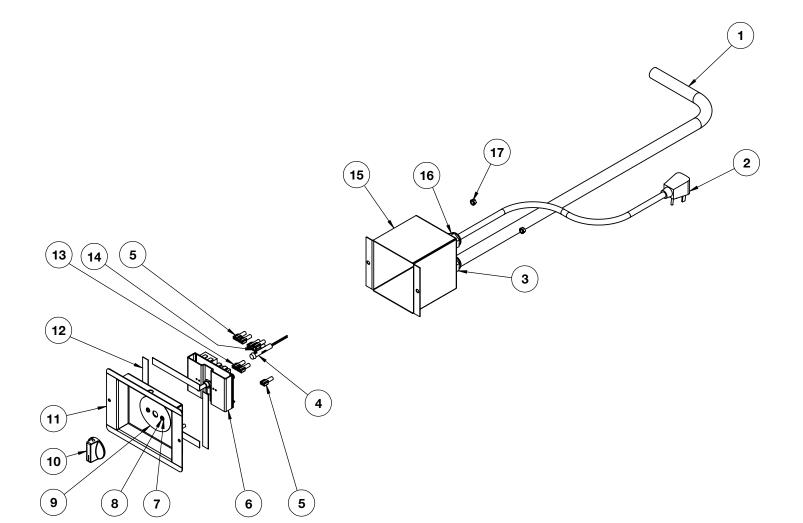

| ITEM | DESCRIPTION | PART NO. | QTY | ITEM | DESCRIPTION | PART NO. | QTY |
|------|----------------------------------|----------|-----|------|----------------------------------|----------|-----|
| 1 | CONDUIT, 6FT (1829mm) | TU-33178 | 1 | 8 | SCREW, 6-32 X 1/4 PAN HD | SC-22500 | 2 |
| 2 | CORDSET 120V | CD-3232 | 1 | 9 | PANEL OVERLAY | PE-35879 | 1 |
| | 208-240V | CD-33840 | 1 | 10 | KNOB | KN-35936 | 1 |
| | 230V | CD-3922 | 1 | 11 | DECOR FACE ASSEMBLY | 5016206 | 1 |
| 3 | BUSHING, STRAIGHT, STRAIN RELIEF | BU-34606 | 1 | 12 | TAPE, VHB FOAM, 1/2" X 72 YD | TA-24637 | 4 |
| 4 | INDICATOR LIGHT 120V | LI-35869 | 1 | 13 | CONNECTOR, QUICK DISCONNECT | CR-33509 | 2 |
| | 208-240V, 230V | LI-35870 | 1 | 14 | CONNECTOR, QUICK DISCONNECT | CR-34826 | 1 |
| 5 | CONNECTOR, TERM, 25" INSULATED | CR-3806 | 5 | 15 | CONTROL POD SHELL ASSEMBLY | 5016269 | 1 |
| 6 | CONTROL | CC-35852 | 1 | 16 | BUSHING, STRAIGHT, STRAIN RELIEF | BU-3964 | 1 |
| 7 | WASHER, #6, LOCK, INT., #410 S/S | WS-2768 | 2 | 17 | NUT, HEX 5MM WITH STAR WASHER | NU-27851 | 2 |

Part numbers and drawings are subject to change without notice.

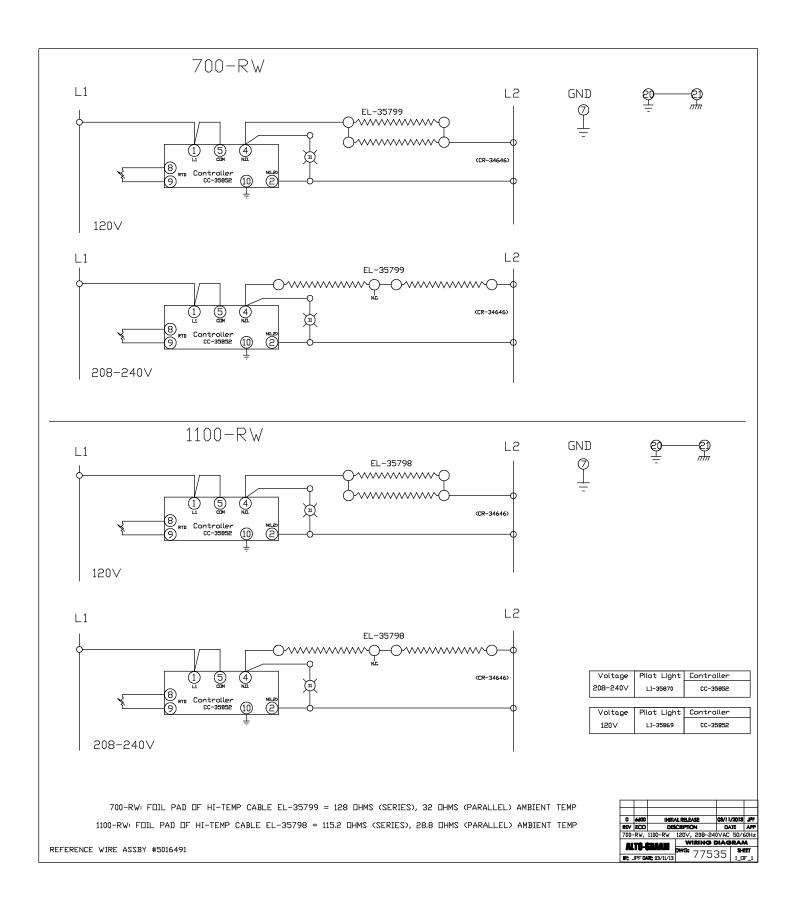

TRANSPORTATION DAMAGE and CLAIMS



All Alto-Shaam equipment is sold F.O.B. shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

- 1. Make an immediate inspection while the equipment is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the material is moved to a storage area.
- 2. Do not sign a delivery receipt or a freight bill until you have made a proper count and inspection of all merchandise received.
- 3. Note all damage to packages directly on the carrier's delivery receipt.
- 4. Make certain the driver signs this receipt. If he refuses to sign, make a notation of this refusal on the receipt.
- 5. If the driver refuses to allow inspection, write the following on the delivery receipt: *Driver refuses to allow inspection of containers for visible damage.*
- 6. Telephone the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation of the time, date, and the person called.
- 7. Save any packages and packing material for further inspection by the carrier.
- 8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

We will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. We cannot, however, file any damage claims for you, assume the responsibility of any claims, or accept deductions in payment for such claims.

LIMITED WARRANTY

Alto-Shaam, Inc. warrants to the original purchaser only that any original part that is found to be defective in material or workmanship will, at Alto-Shaam's option, subject to provisions hereinafter stated, be replaced with a new or rebuilt part.

The original parts warranty period is as follows:

For the refrigeration compressor on Alto-Shaam Quickchillers[™], five (5) years from the date of installation of appliance.

For the heating element on Halo Heat® cooking and holding ovens, as long as the original purchaser owns the oven. This excludes holding only equipment.

For all other original parts, one (1) year from the date of installation of appliance or fifteen (15) months from the shipping date, whichever occurs first.

The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first. Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any

additional fees.

To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

THIS WARRANTY DOES NOT APPLY TO:

1. Calibration.

- 2. Replacement of light bulbs, door gaskets, and / or the replacement of glass due to damage of any kind.
- 3. Equipment damage caused by accident, shipping, improper installation or alteration.
- 4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
- 5. Damage incurred as a direct result of poor water quality, inadequate maintenance of steam generators and/or surfaces affected by water quality. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator.
- 6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm[®] Cleaner, including but not limited to damage due to chlorine or other harmful chemicals. Use of Alto-Shaam's Combitherm[®] Cleaner on Combitherm[®] ovens is highly recommended.
- 7. Any losses or damage resulting from malfunction, including loss of product, food product, revenue, or consequential or incidental damages of any kind.
- 8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. In no event shall Alto-Shaam be liable for loss of use, loss of revenue or profit, or loss of product, or for any indirect, special, incidental, or consequential damages. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.



Effective November 1, 2012

| | RECORD THE MODEL AND SERIAL NUMBER OF THE APPLIANCE FOR EASY REFERENCE. ALWAYS REFER TO BOTH MODEL AND SERIAL NUMBER IN ANY CONTACT WITH ALTO-SHAAM REGARDING THIS APPLIANCE. |
|--------|--|
| Mode | I: Date Installed: |
| Voltag | pe:Purchased From: |
| Serial | Number: |

 W164
 N9221
 Water Street
 P.O. Box
 450
 Menomonee
 Falls,
 Wisconsin
 53052-0450
 U.S.A.

 PHONE:
 262.251.3800
 • 800.558-8744
 USA/CANADA
 FAX:
 262.251.7067
 • 800.329.8744
 U.S.A.
 ONLY

www.alto-shaam.com