Thurmaduke - Electric Quick Reference Guide

OPERATIONS

AWARNING

- Steam can cause serious burns.
- Always wear protective covering on your hands and arms.
- Lift the lid or pan directing escaping steam away from you.
- Never pour water into a well that has been heated dry.

Wet Operation

CAUTION

IF WATER IS USED, SPILLAGE PANS ARE REQUIRED.

- 1. Fill food well with two (2) quarts of water.
- 2. Turn the control to "HIGH" and pre-heat the warmer for 30 (1) minutes.
- 3. After pre-heating, set the control to your desired serving temperature.

Dry Operation

- 1. Pre-heat the well on "HIGH" for approximately 15 (1) minutes.
- 2. After pre-heating, set the control to your desired serving temperature.

SWITCH DIAL SETTINGS		RECOMMENDED TEMPERATURES (in degrees)	FOODS OR TYPES OF FOODS
Covers			
ON	OFF	(3.1 0.0 9. 0.0)	
Lo	2	140° - 150°F	Rolls - Thick Soups Creamed Foods - Mashed Potatoes
2-3	4-5	150° - 170°F	Roasts* - Short Ribs - Sliced Meats Baked Ham* - Fish - Vegetables - Cutlets Stews - Baked Beans - Croquettes Fried Liver – Fried Potatoes Fried Chicken Medium Gravies
3-4	4-6	170° - 200°F	Baked Potatoes - Bar- becued Ribs Dressing - Thin Gravies and Soups



CARE AND CLEANING

AWARNING

- Do not use any highly caustic cleaners, acids or ammonia.
- Do not allow water to stand in the well for long periods of time.
- Water must be removed from the well and the well cleaned after each use.

DAILY CLEANING

- 1. Turn the control knob to the OFF position and allow unit to cool before cleaning.
- 2. Drain or remove water from the well.

CAUTION Do not allow water to splash on the controls or wiring.

- 3. Use a soft cloth or sponge with a mild detergent to clean the entire warmer assembly.
- 4. Rinse completely with warm water and then dry.
- 5. A plastic scouring pad and a mild detergent may be used to remove hardened food.

AWARNING Do not use steel wool.

WEEKLY CLEANING

1. Scale deposits may be removed using a plastic pad and a de-scaling agent for use on stainless steel.

AWARNING Failure to keep these deposits from building up may cause corrosion of the stainless steel.

- 2. After de-scaling, the well assembly should be rinsed thoroughly with a solution of vinegar and water to neutralize all cleaner residue.
- 3. Wipe the well assembly dry and leave uncovered.
- 4. Wipe out and clean the inside of the heating compartments.

NOTICE: Care should be used to prevent spilling when placing full food containers into the unit.

Thurmaduke - Electric Quick Reference Guide

TROUBLESHOOTING

- 1. Problem: Unit does not heat:
 - a. Has unit been connected to a proper electrical source of the proper voltage?
 - b. Is electric turned on at the main? Check the circuit breaker or fuse.
 - c. Are the master switch and/or control knobs set to the "ON" position?
- 2. Problem: Unit does not maintain proper food temperature.
 - a. Are the controls set to the proper setting?
 - b. If used with water, was hot water used to fill well? If not, allow extra pre-heat time.
 - c. Has unit been pre-heated for 30-45 minutes?
 - d. Were pans of food placed into unit at or above desired temperature?
 - e. Has the food been kept covered?
 - f. Are there air conditioning ducts, take-up air ducts or fans located near or over unit, causing cool drafts?
 - g. Has unit been connected to a proper electrical source of the proper voltage? If so, is there a "low" voltage condition?



Phone: 314-231-1130 Toll Free: 1-800-735-3853 Fax: 314-231-5074