

INSTALLATION INSTRUCTIONS

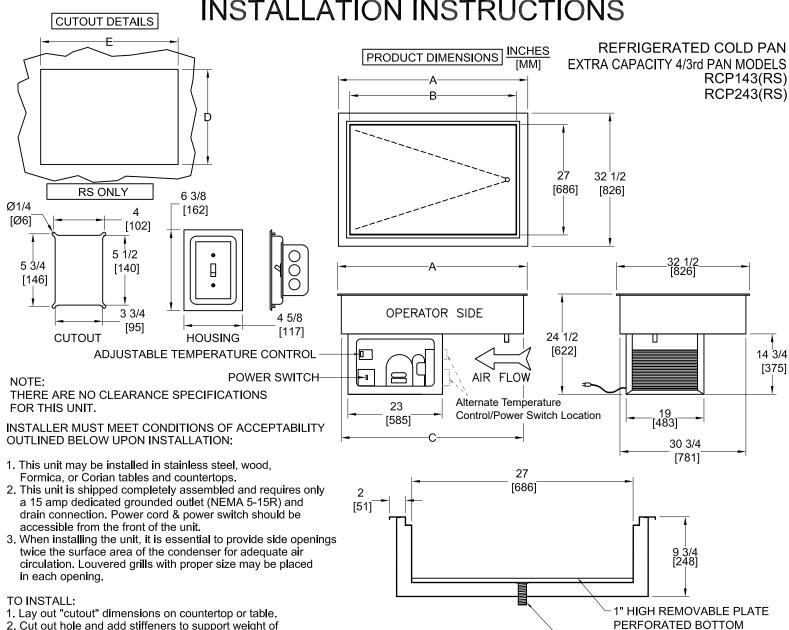

- 2. Cut out hole and add stiffeners to support weight of unit if necessary. Countertop must be flat and level before installing cold pan.
- 3. Apply a generous bead of silicone sealant to underside of mounting flange before setting unit into cutout. Remove any excess sealant from top flange and countertop.
- 4. Connect 1 inch drain to drain pan or floor drain.

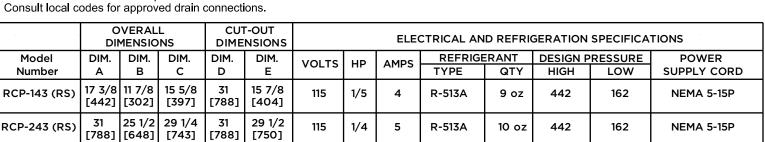



1" NPT DRAIN

CROSS-SECTION OF COLD PAN

CENTERED IN PAN