

HEAVY-DUTY EQUIPMENT STAND

Thank you for purchasing this Vollrath® product! Save this manual for reference and the packaging in case shipping is necessary.

SAFETY PRECAUTIONS

To help ensure safe use, please read and fully understand this manual and all safety messages before operation!

⚠ WARNING

Warning indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

Caution indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE: addresses practices not related to physical injury.

	<div style="text-align: center;">  <h2 style="margin: 0;">WARNING</h2> </div> <p>Fire Hazard Restraining device must be used with mobile stands.</p>
--	---

Installation of this appliance must conform with local codes, or in the absence of local codes, with the National Fuel Gas Code, NFPA 54/ANSI Z223.1.

9.6.1.1 Commercial Cooking Appliances. Commercial cooking appliances that are moved for cleaning and sanitation purposes shall be connected in accordance with the connector manufacturer's installation instructions using a listed appliance connector complying with ANSI Z21.69/CSA 6.22, *Connectors for Movable Gas Appliances*. The commercial cooking appliance connector installation shall be configured in accordance with the manufacturer's installation instructions.

9.6.1.2 Movement of appliances with casters shall be limited by restraining device installed with the connector and appliance manufacturer's installation instructions.

To reduce risk of injury or damage to the unit

- Use this equipment in a flat, level position.
- Included restraining device must be installed and used in accordance with the device manufacturer's instructions.
- Before each use, inspect the unit to ensure it is clean.
- Items must not protrude or hang over the edge of the stand.
- Operate in non-public areas, away from children—and attend unit during use.
- Only operate if functioning properly and undamaged.



4087924

Item	Description	Capacity lb (kg)
4087924	24" Heavy-Duty Mobile Stand	500 (226)
4087936	36" Heavy-Duty Mobile Stand	550 (249)
4087948	48" Heavy-Duty Mobile Stand	600 (272)

FUNCTION AND PURPOSE

These stands are intended to support foodservice appliances (for example, Vollrath gas appliances and more) with corresponding equipment widths. Mobile equipment stands are not to be used as carts, but to allow limited mobility for cleaning.

Thoroughly clean and dry these stands before use.

UNPACKING


1. Remove all packing material and tape, as well as any protective plastic; dispose of in an environmentally responsible way when no longer needed.
2. Clean any glue residue left over from the plastic or tape.

LEG INSTALLATION

1. Insert the leg (A) through the hole in the shelf (B). See illustration below. Repeat for all legs.


⚠ WARNING

The shelf is to be positioned at 6 1/8" (15.6 cm) from the floor for the best structural integrity. Ensure that all screws are in place and tight. Do not use the stand if any screws are missing.

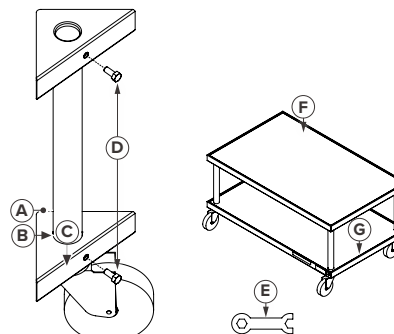

LEG INSTALLATION CONTINUED

- Slide the shelf (G) into the top of the caster (C); see illustration below. Repeat for all legs.

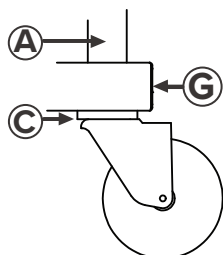

- Install casters and tighten them by turning the assembly clockwise. Slide the shelf down so it touches the tops of the casters.
- Tighten the eight hex bolts with the wrench (E) provided (75-80 in. lb).



WARNING

Level or adjust the stand when there is nothing on the top (F) or shelf (G).



WARNING

Only use this mobile stand with the included restraining device or the Vollrath® replacement as identified in the table.

- Place stand in desired location, install the equipment to be used on the stand, then install the restraining device in accordance with manufacturer's instructions.

BEFORE FIRST USE

- Clean the stand per the Cleaning section of this manual.
- Ensure stand is in a flat, level location, a restraining device is in use, and casters are locked.

CLEANING

NOTICE: Clean the stand after every use to maintain appearance and increase service life.

- Use a damp cloth or sponge dipped in soapy water to wipe surfaces of the stand.

SERVICE AND REPAIR

To avoid serious injury or damage, never attempt to repair the unit or replace a damaged power cord yourself. Do not send units directly to The Vollrath Company LLC. Please contact Vollrath Technical Service for instructions.

When contacting Vollrath Technical Service, please be ready with the item number, model number (if applicable), serial number, and proof of purchase showing the date the unit was purchased.

WARRANTY STATEMENT FOR THE VOLLRATH CO. L.L.C.

The Vollrath Company LLC warrants to the original commercial end user that each of Vollrath's foodservice products will be free from defects in materials and workmanship.

For warranty period, exclusions, and details, visit vollrathfoodservice.com/vollrath-resources/warranty-info/warranty-policy.

United States
The Vollrath Company, L.L.C. Headquarters
1236 North 18th Street
Sheboygan, Wisconsin 53081-3201 USA
Main Tel: 800-319-9549 or 920-457-4851
Main Fax: 800-752-5620 or 920-459-6573
Canada Customer Service: 800-695-8560
Tech Services: techservices@vollrathco.com
vollrathfoodservice.com

Spain
Vollrath Pujadas Sau.
Ctra De Castanyet, 132
PO Box 121
17430 Santa Coloma De Farners
Girona
Spain
Tel: +34972843201
info@pujadas.es

China
Vollrath (Shanghai) Trading Limited
Rm 906, Building A
Hongwell Plaza
1308 Lianhua Road
Minhang District
Shanghai, 201102
Tel. 86-21-50589580
info@pujadas.es

Mexico
Vollrath de Mexico S. de R.L.
de C.V. Periferico Sur No.
7980 Edificio 2-C Col. Santa
Maria Tequepexpan 45601
Tlaquepaque, Jalisco | Mexico
Tel: +52-33-3133-6767
Tel: +52-33-3133-6769
Fax: +52-33-3133-6768