

ASSEMBLY INSTRUCTIONS

"UBPT" Underbar Pass-Thru

PARTS:


- (32) #8-32 1/2" SS Screw
- (4) 1/4-20 x 1/2" SS Bolt
- (1) Hose Clamp
- (1) 10^{LF} Clear Flex Tube
- (4) 5/16" Black Hole Plug

TOOLS REQUIRED:

- Phillips Screwdriver
- 7/16" Wrench
- 4mm Hex Wrench (Included)


ASSEMBLY INSTRUCTIONS:

1. Peel The Protective Film From All Items.
2. Lay The Ice Bin Assembly Upside Down.
3. Connect Bracing Sockets To Bracing And Legs At Desired Height And Tighten With A 4mm Hex Wrench.
4. Insert Legs Into Leg Gussets And Tighten With 4mm Hex Wrench.
5. Roll Ice Bin Assembly Onto A Front Face.
6. Insert #8-32 Screws Into The Top (3) Inserts On The End Panels. Leave A Gap Under The Screw Head Approximately 1/16".
7. Slide The End Panel Bottom Cover Up Approximately 6" From The Leveler Bolts. Put The Mounting Flange To The Inside.
8. Position The End Panel On The Front Edge And Insert The (3) #8-32 Screw Heads Into The (3) Keyhole Slots On The Ice Bin Assembly.
9. Attach The End Panel With (3) Additional #8-32 Screws On The Lower Part Of The Ice Bin Assembly. *Repeat Steps 8 & 9 For The Other End Panel.
10. Use Two People To Roll The Unit Onto It's Feet.
11. Attach The Chase To The Ice Bin Assembly Using (4) #8-32 Screws.
12. Position The Shelf So That The Drain Is On The Same End As The Chase. Attach With (4) 1/4-20 Bolts.
13. Set The Unit In Place And Adjust All Levelers.
14. Slide The End Panel Bottom Cover Down To The Floor And Attach With (8) #8-32 Screws. Repeat On Other End Panel.
15. If Desired, Anchor The Bottom Cover To The Floor.
16. Position Ice Bin Lids And Shelf Grates In Place.
17. Caulk All Seams Where Parts Mate Together And Around The End Panels Where They Contact The Floor.
18. Fill All Set Screws On The Bracing And Leg Gussets With Caulk.
19. Attach Plastic Hose To The Drain On The Shelf. Secure With Hose Clamp. Run Hose Down Through The Chase And To A Floor Drain.

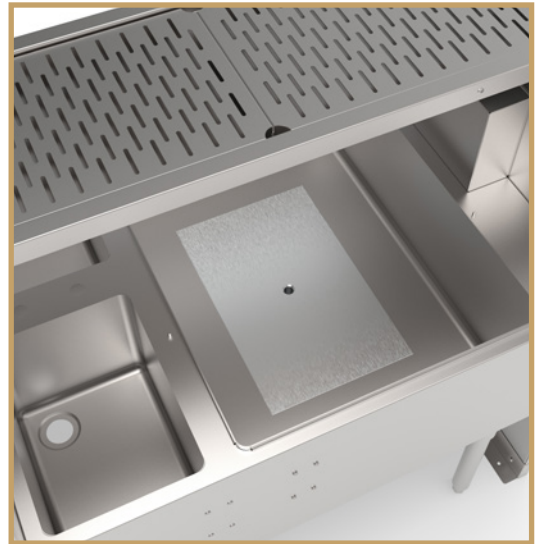


SEE REVERSE FOR ASSEMBLY DIAGRAM


0824

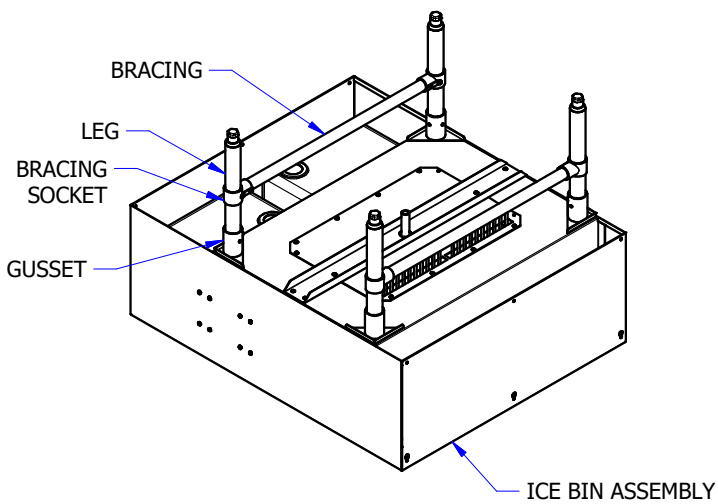

STEPS 2-4

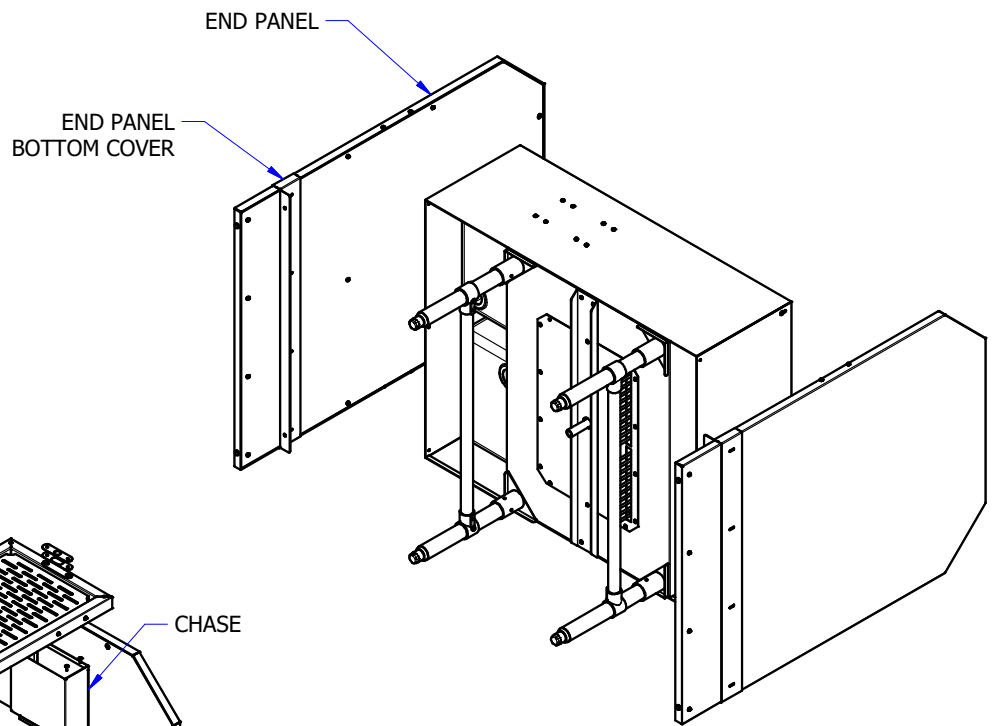

STEPS 5-9

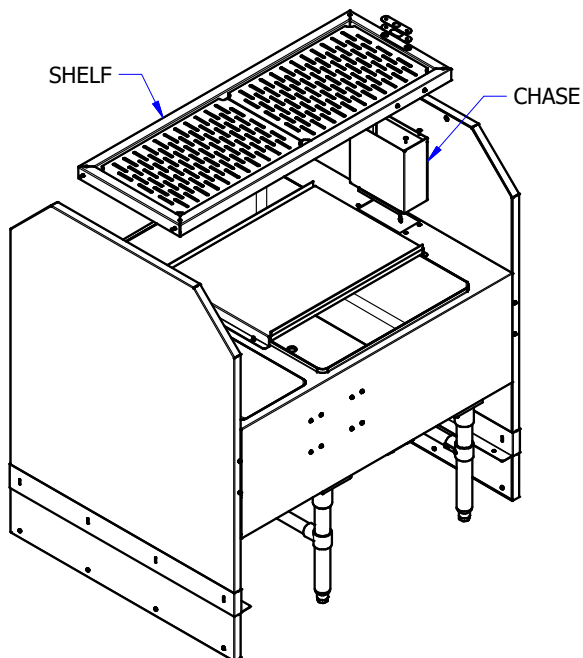

STEPS 10-17